


Magma Prime Service Manual


After Service Department
Version: 5.0
Date: 2023.08.25

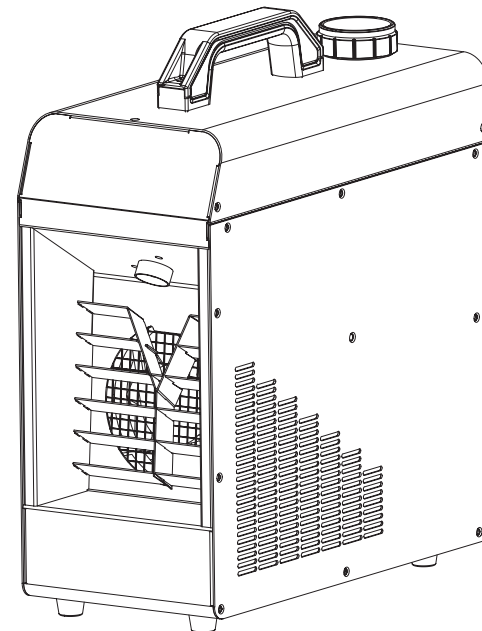



Magma Prime

Service Manual Contents


- Exploding View 1
- Wiring diagram 9
- Circuitry of The PCB 10

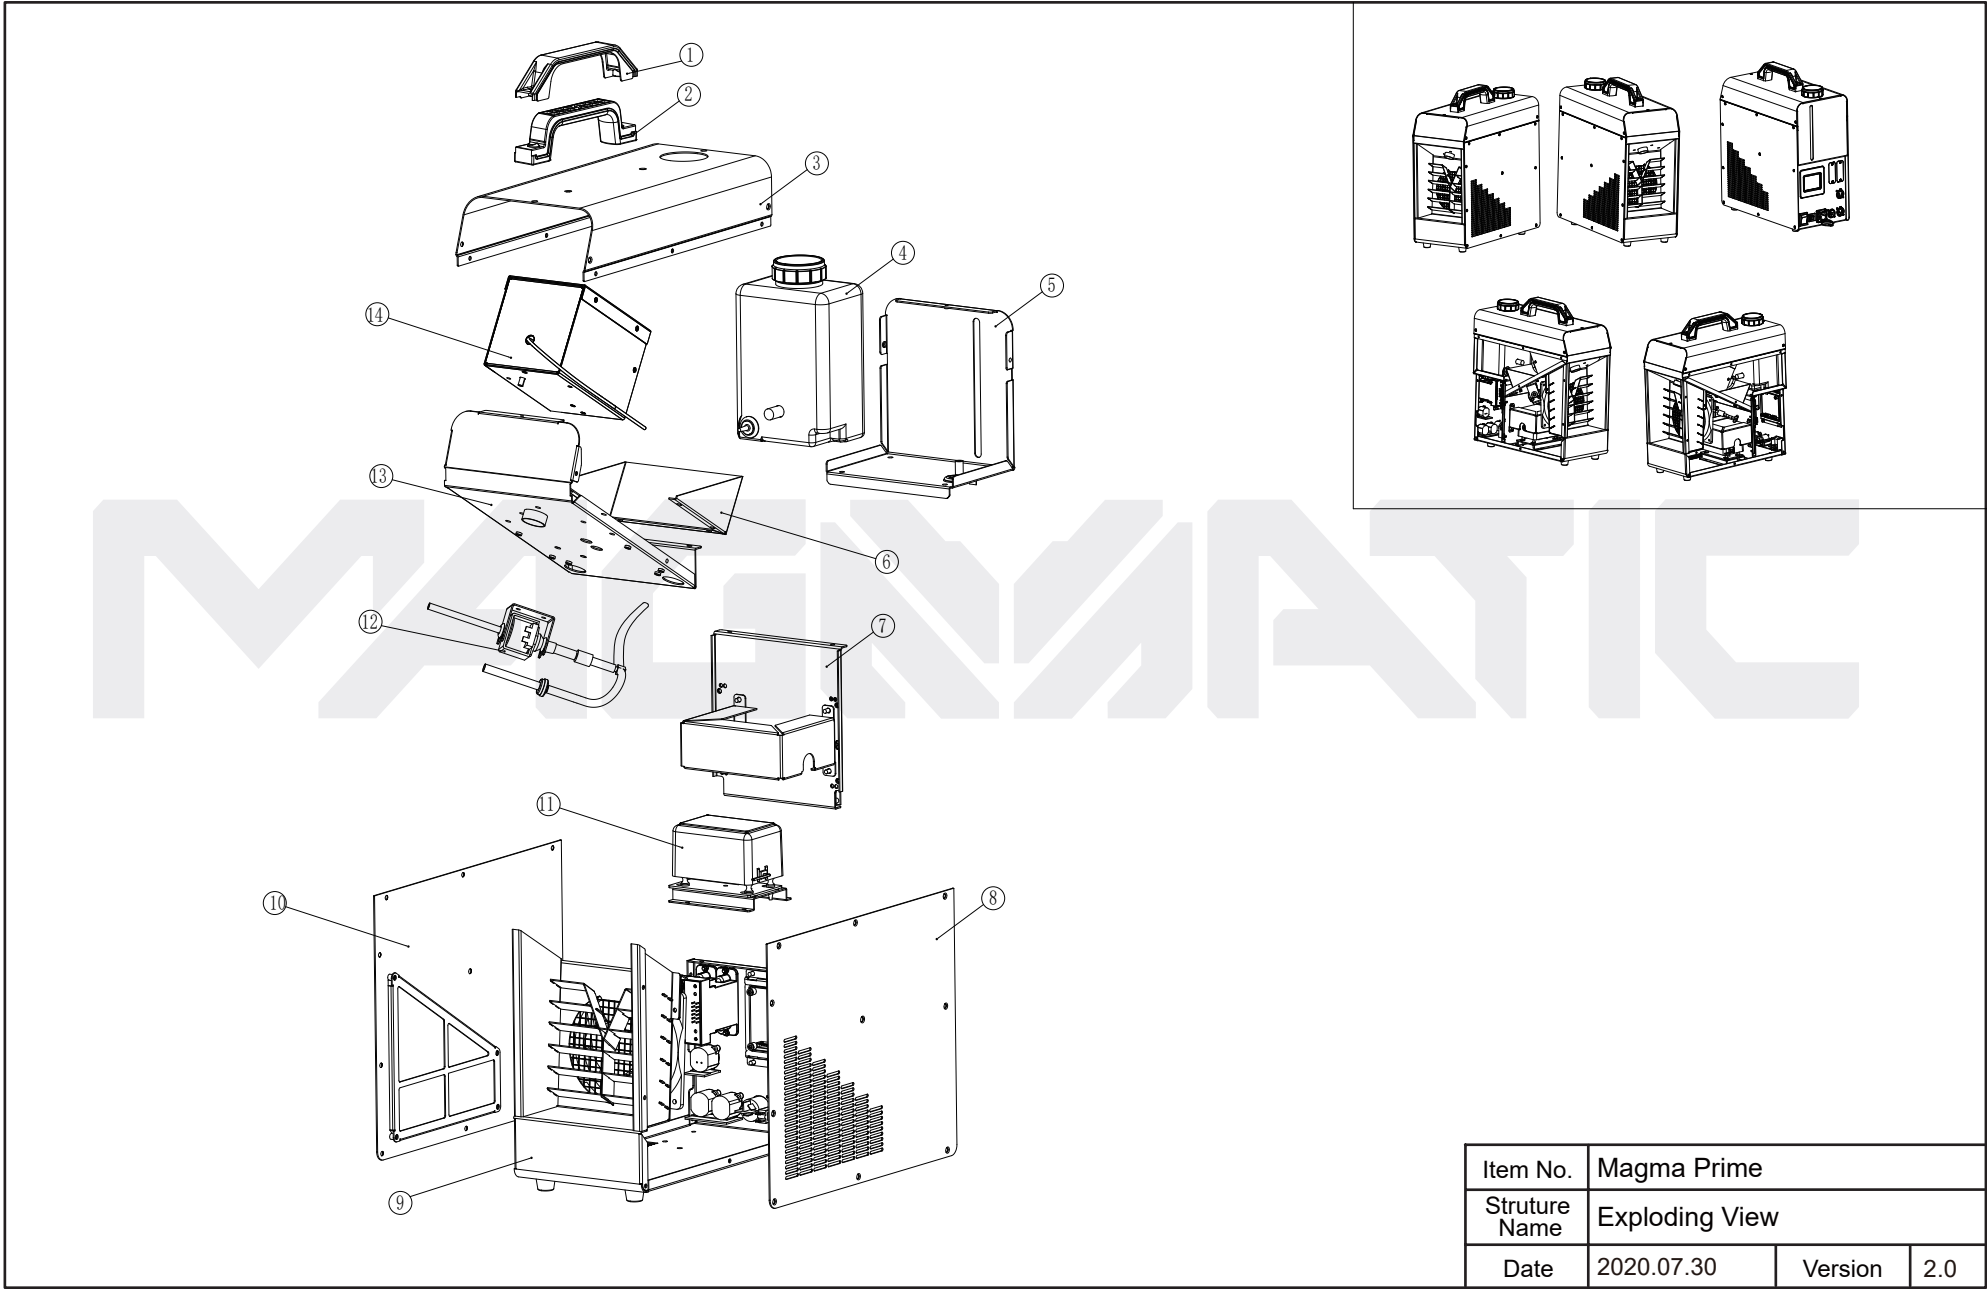


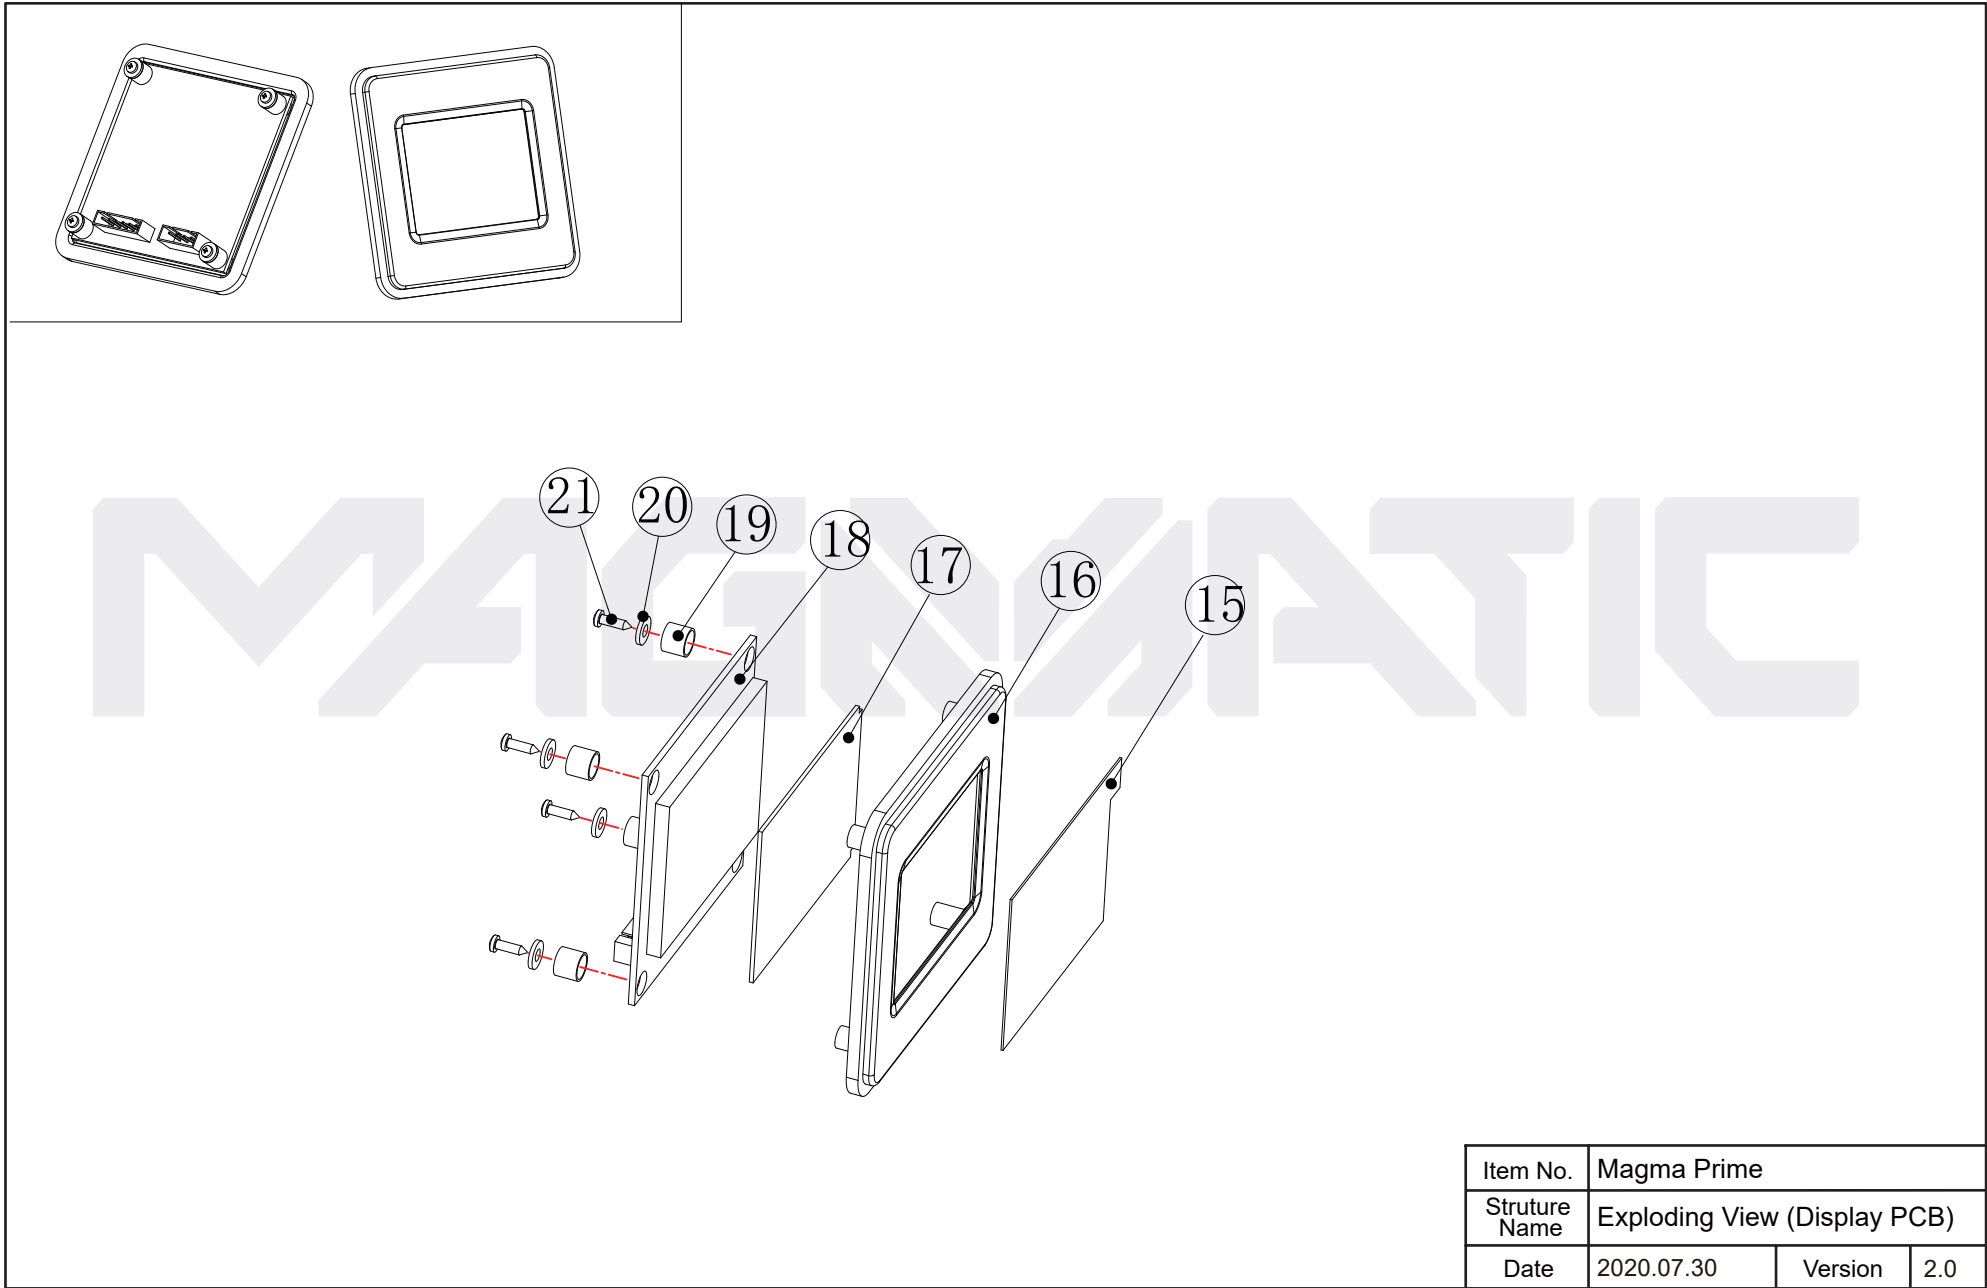


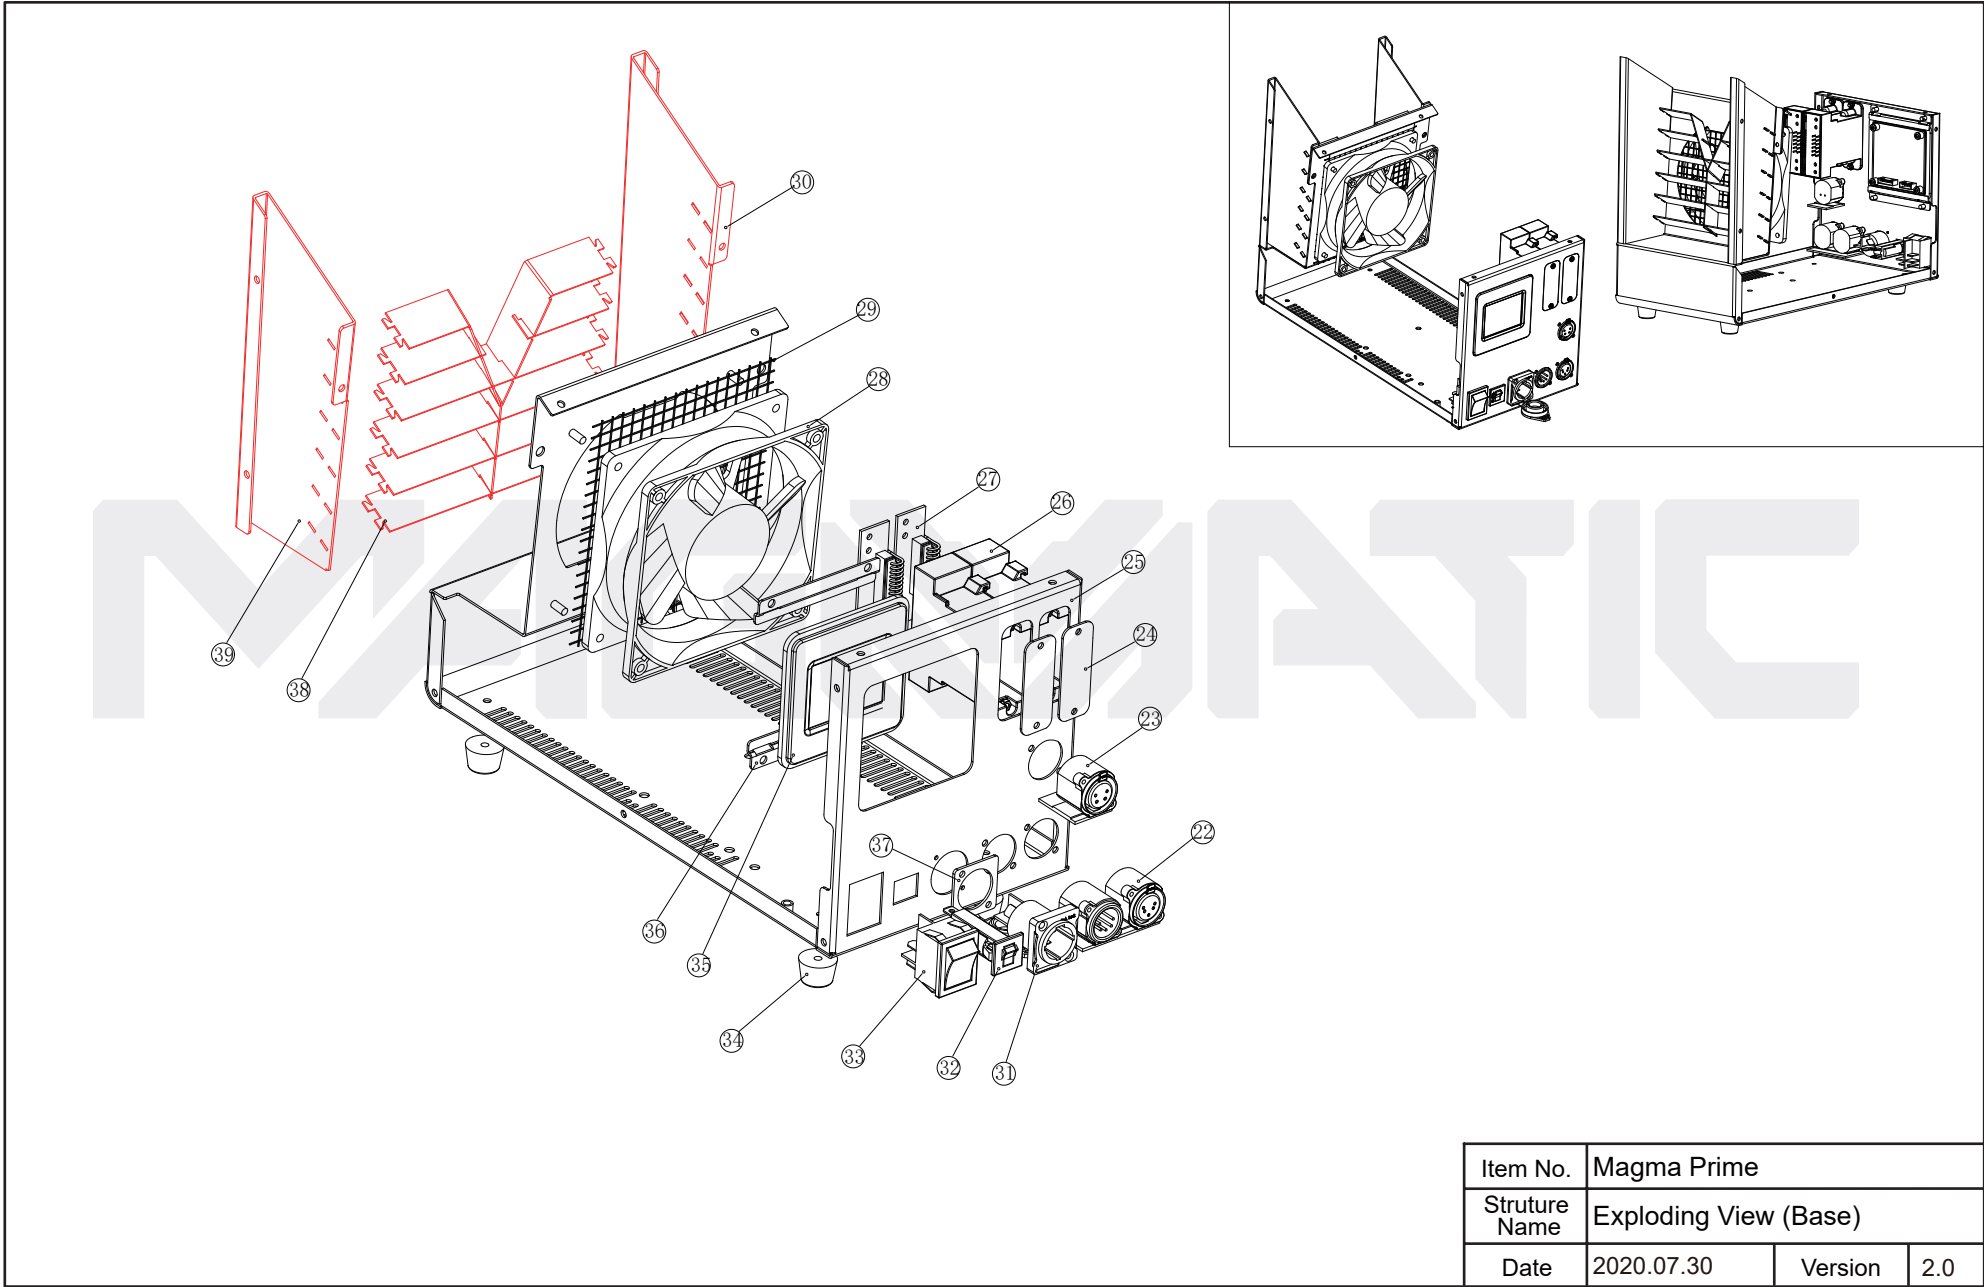



Item No.	Magma Prime		
Struture Name	Exploding View (Base)		
Date	2020.07.30	Version	2.0

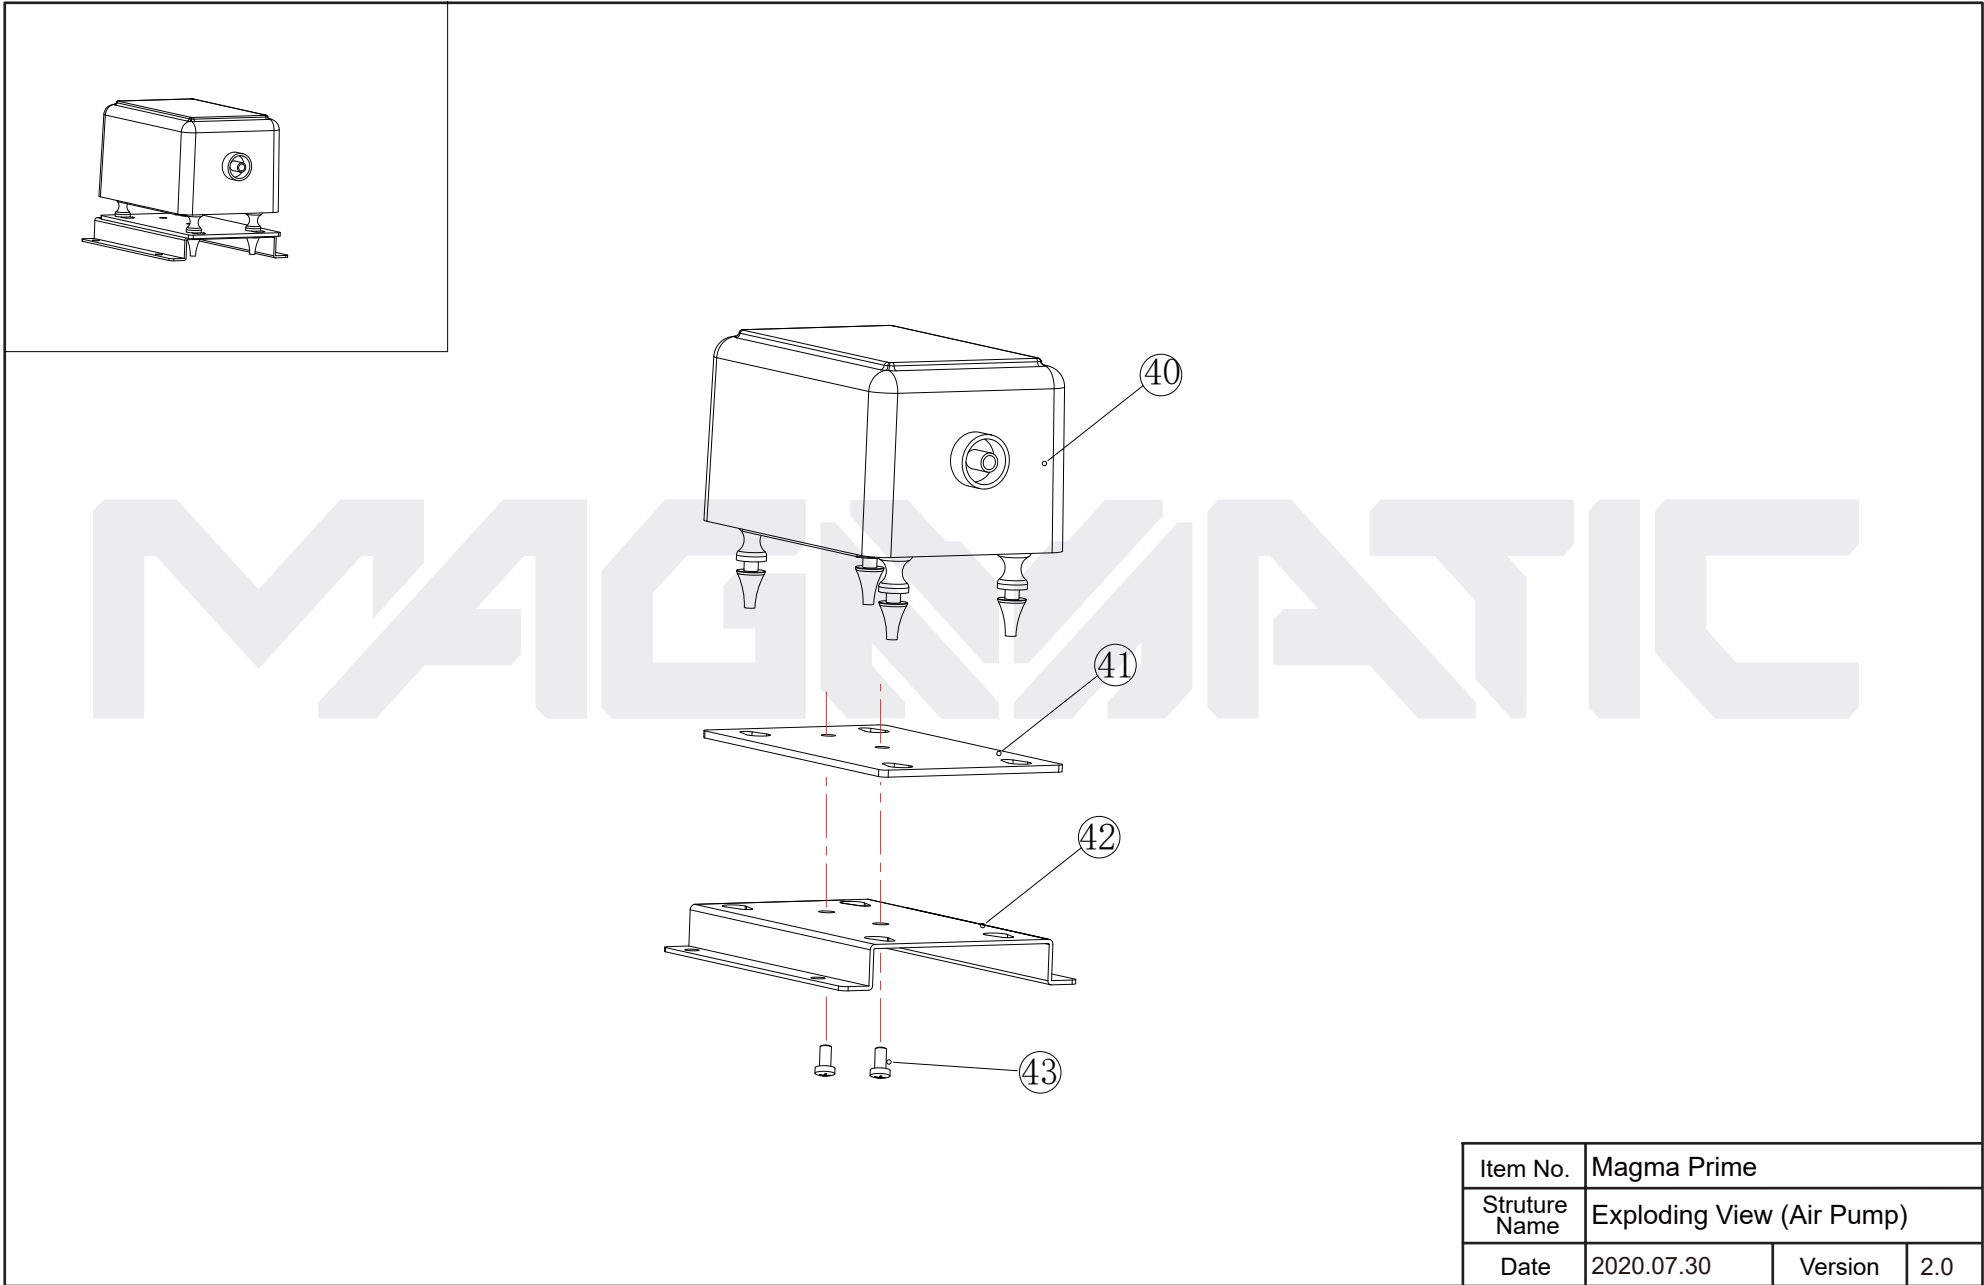


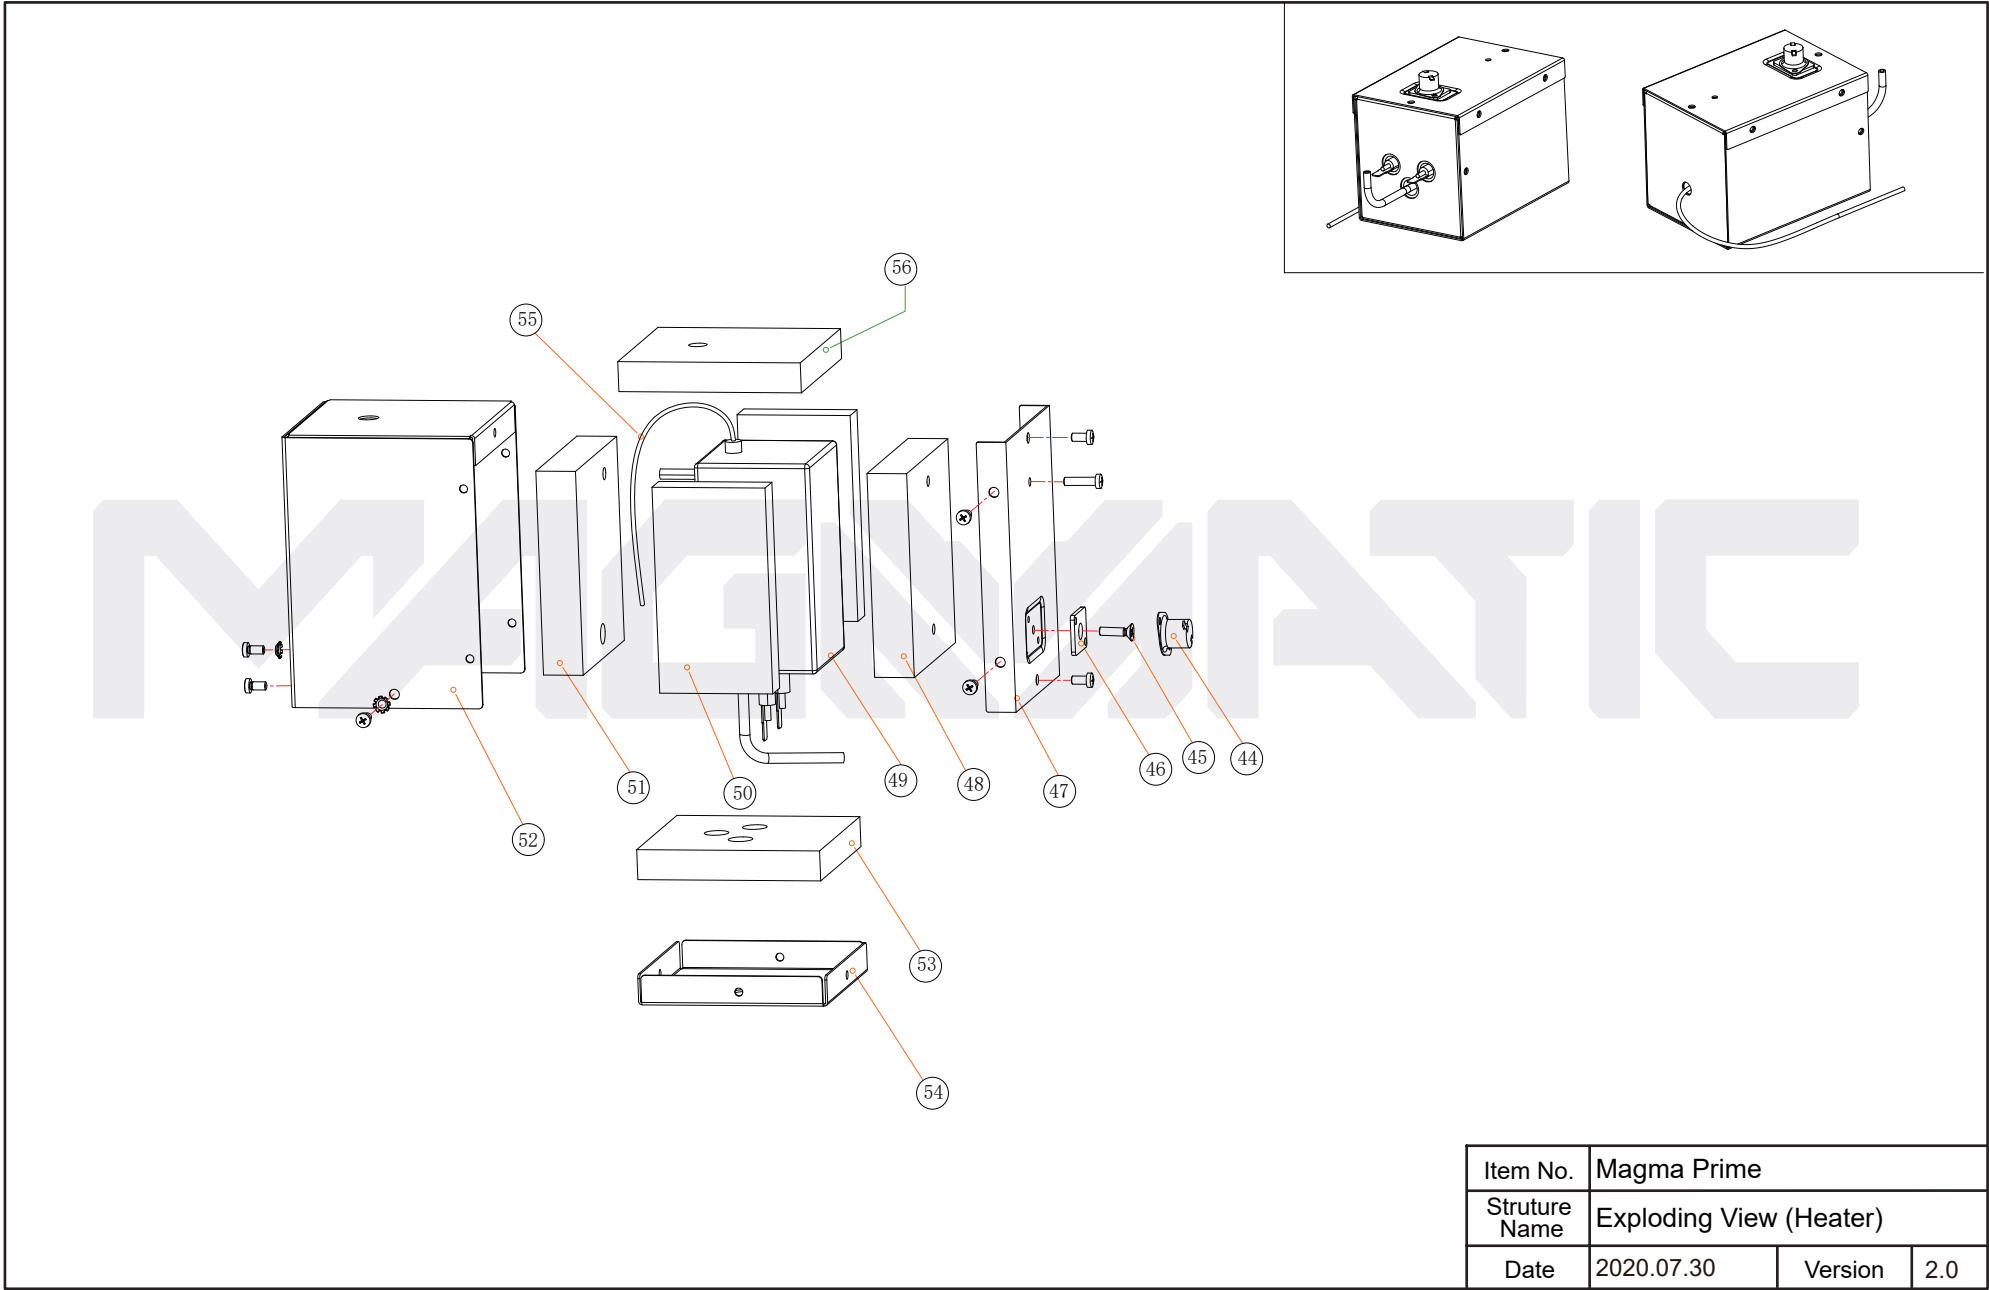


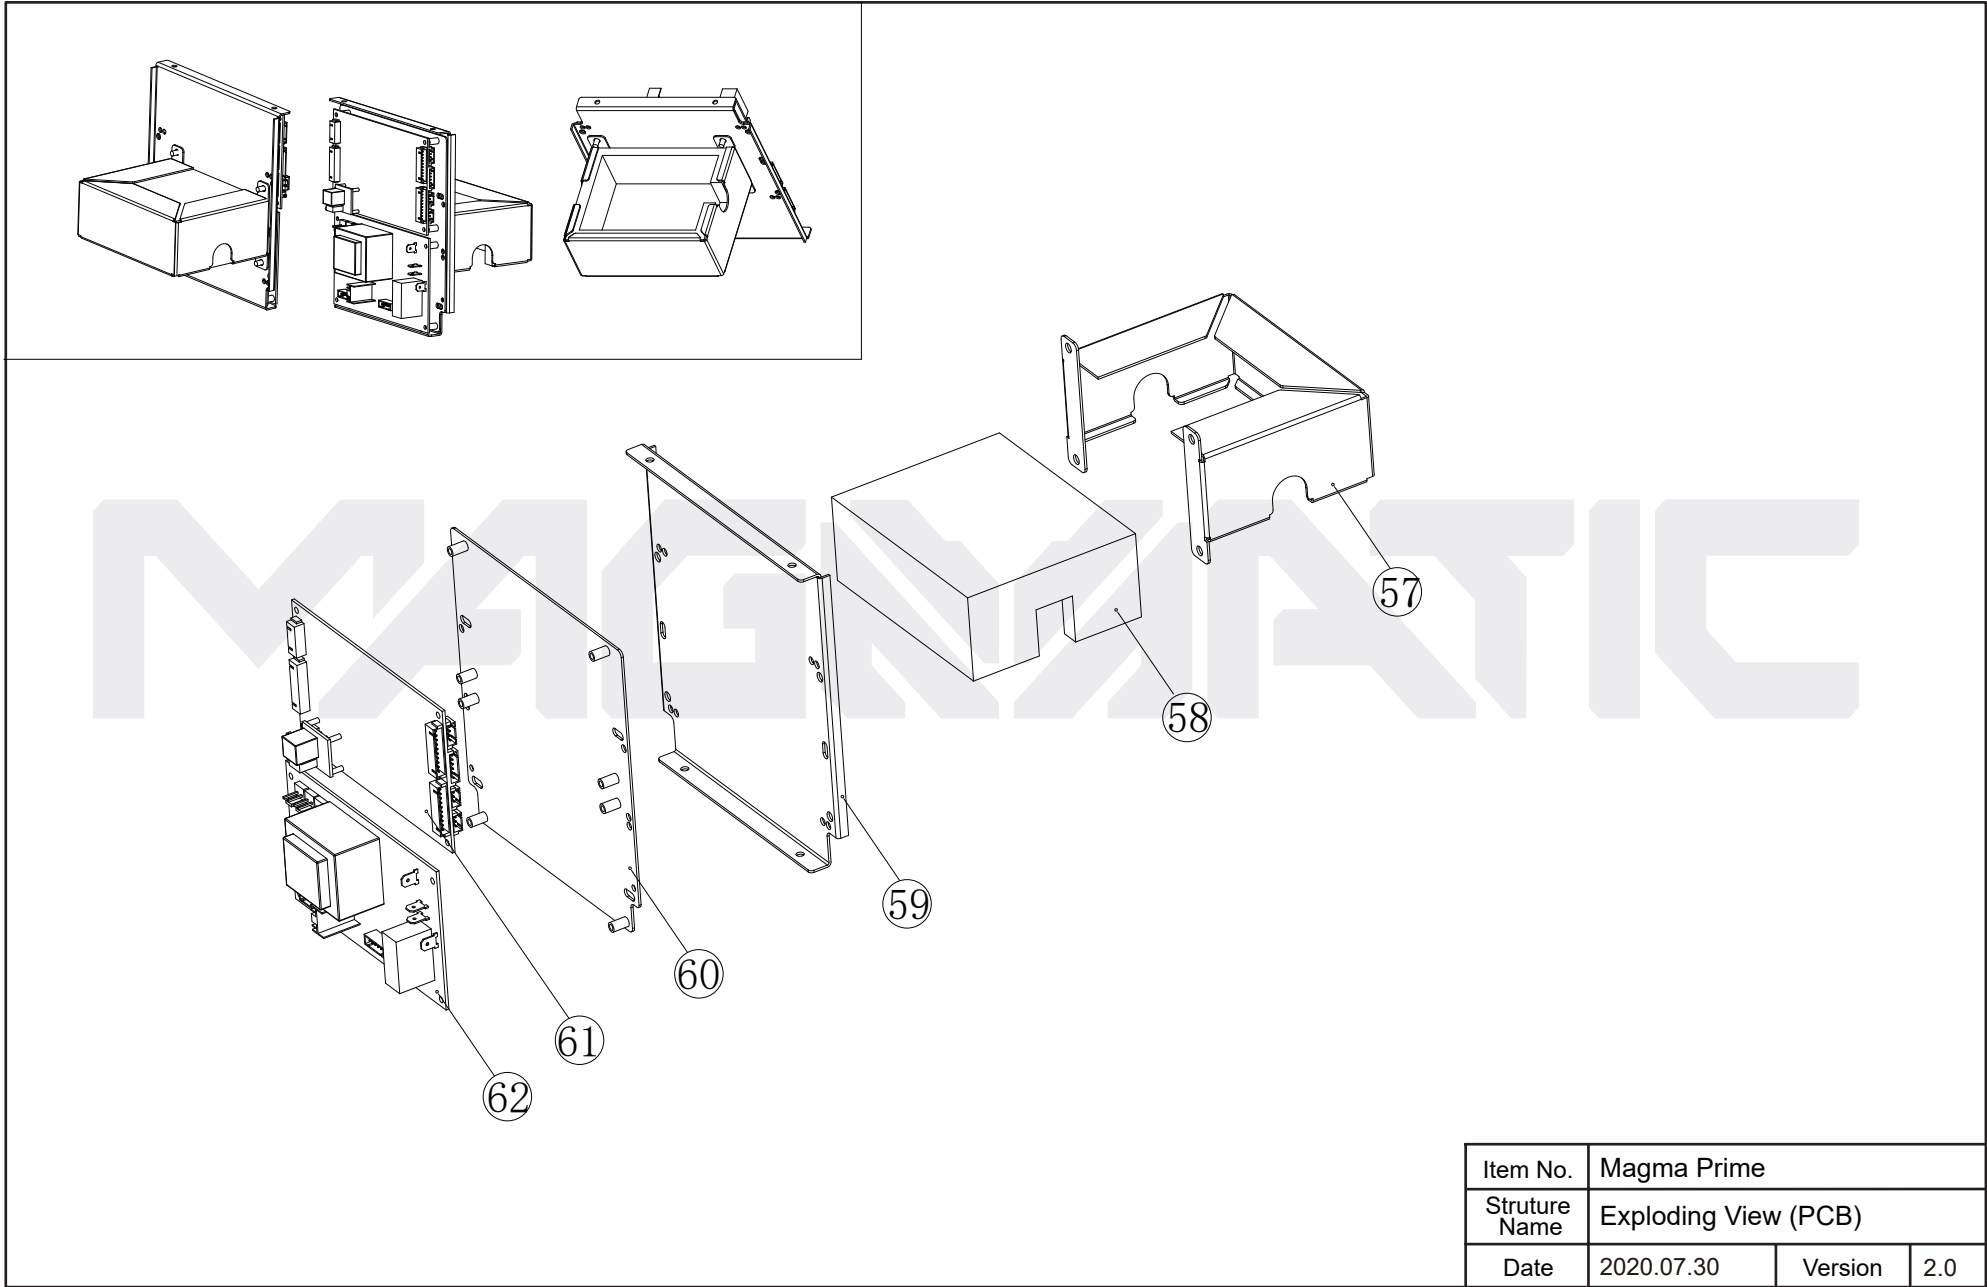


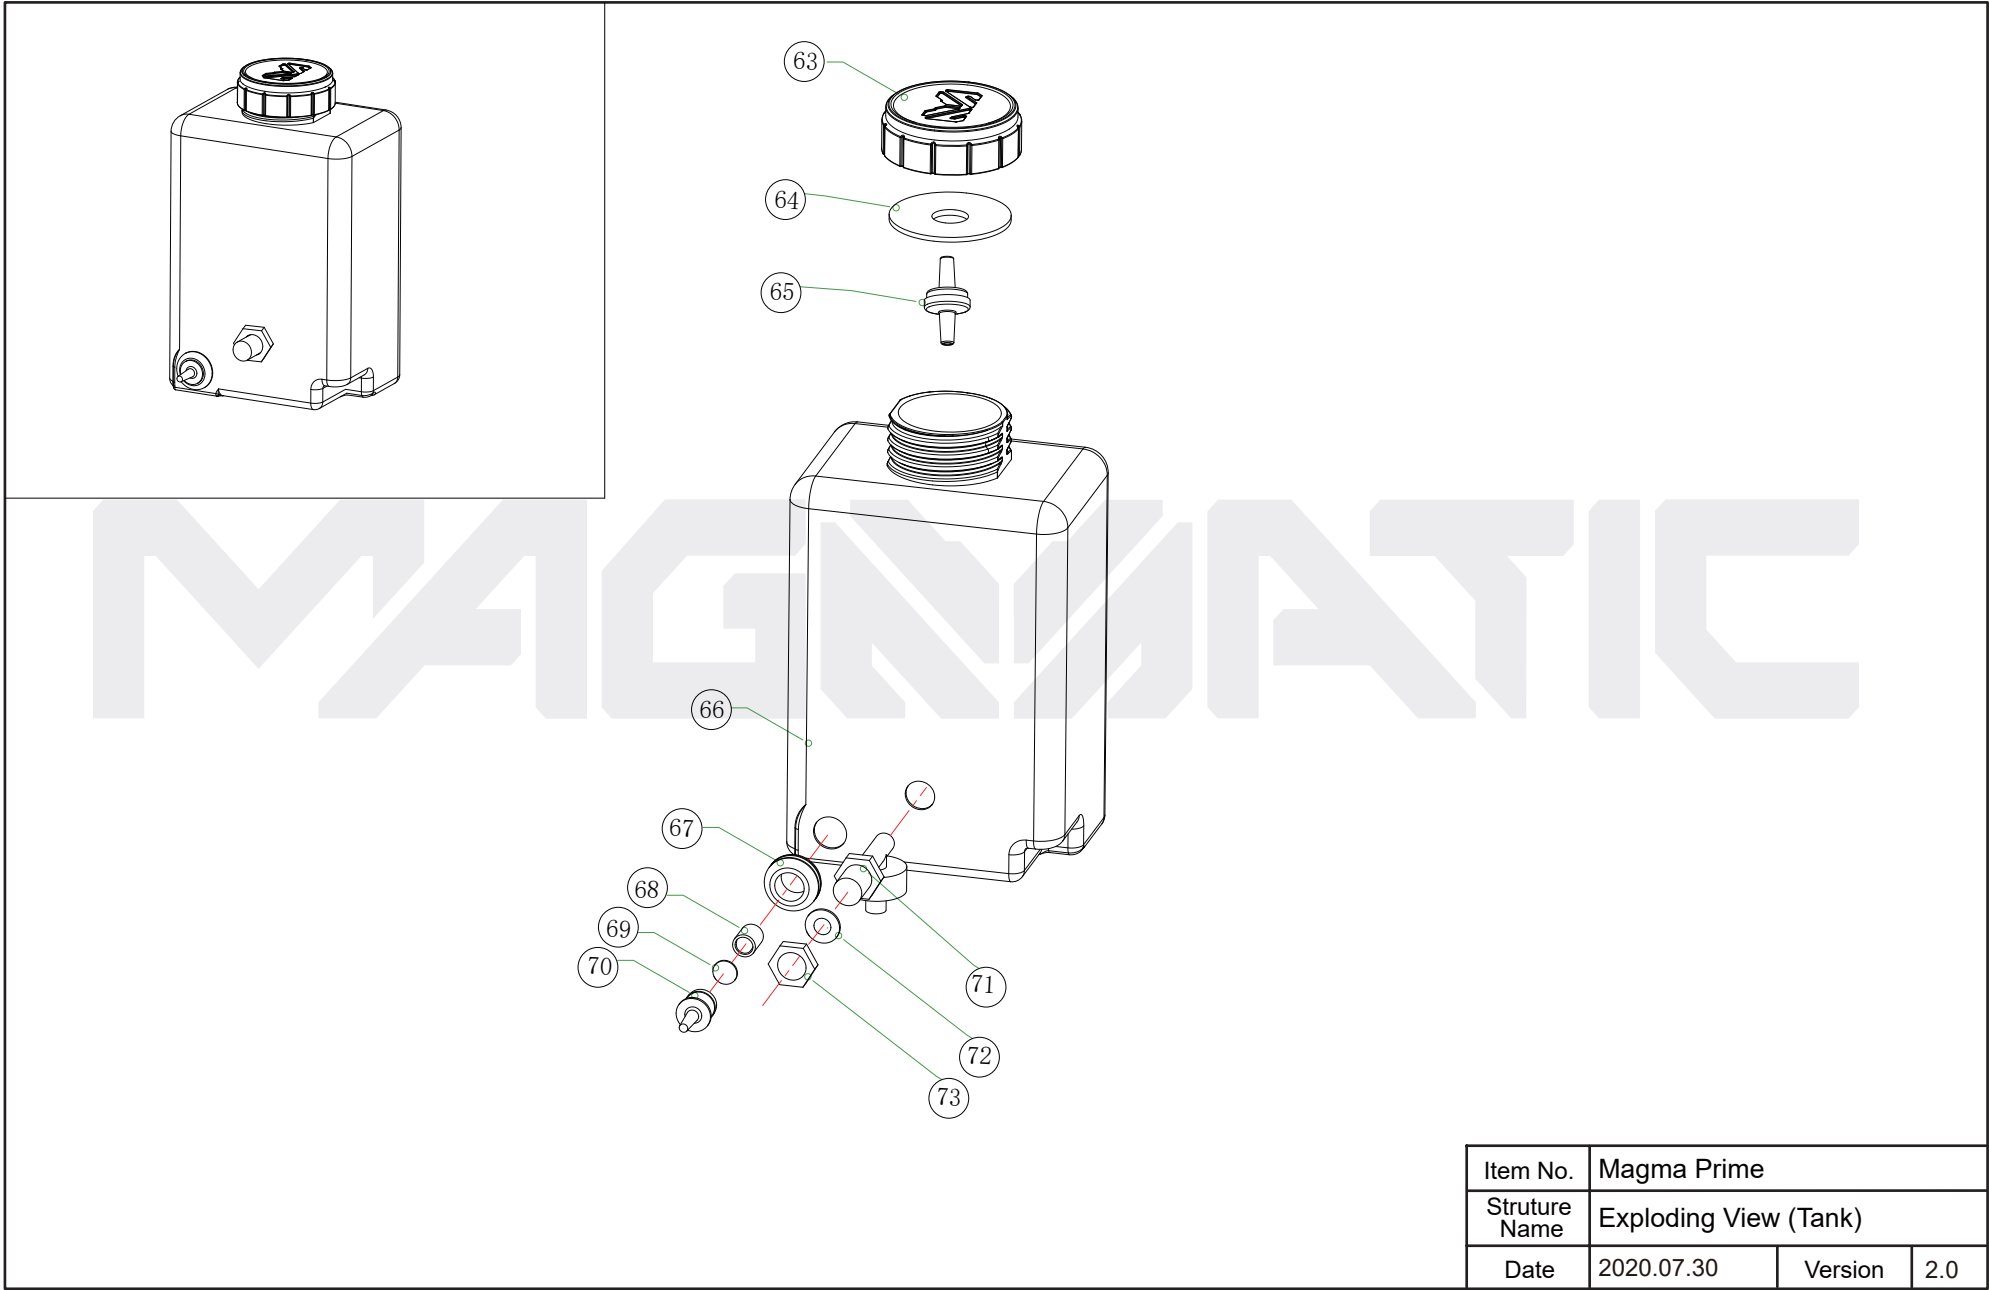

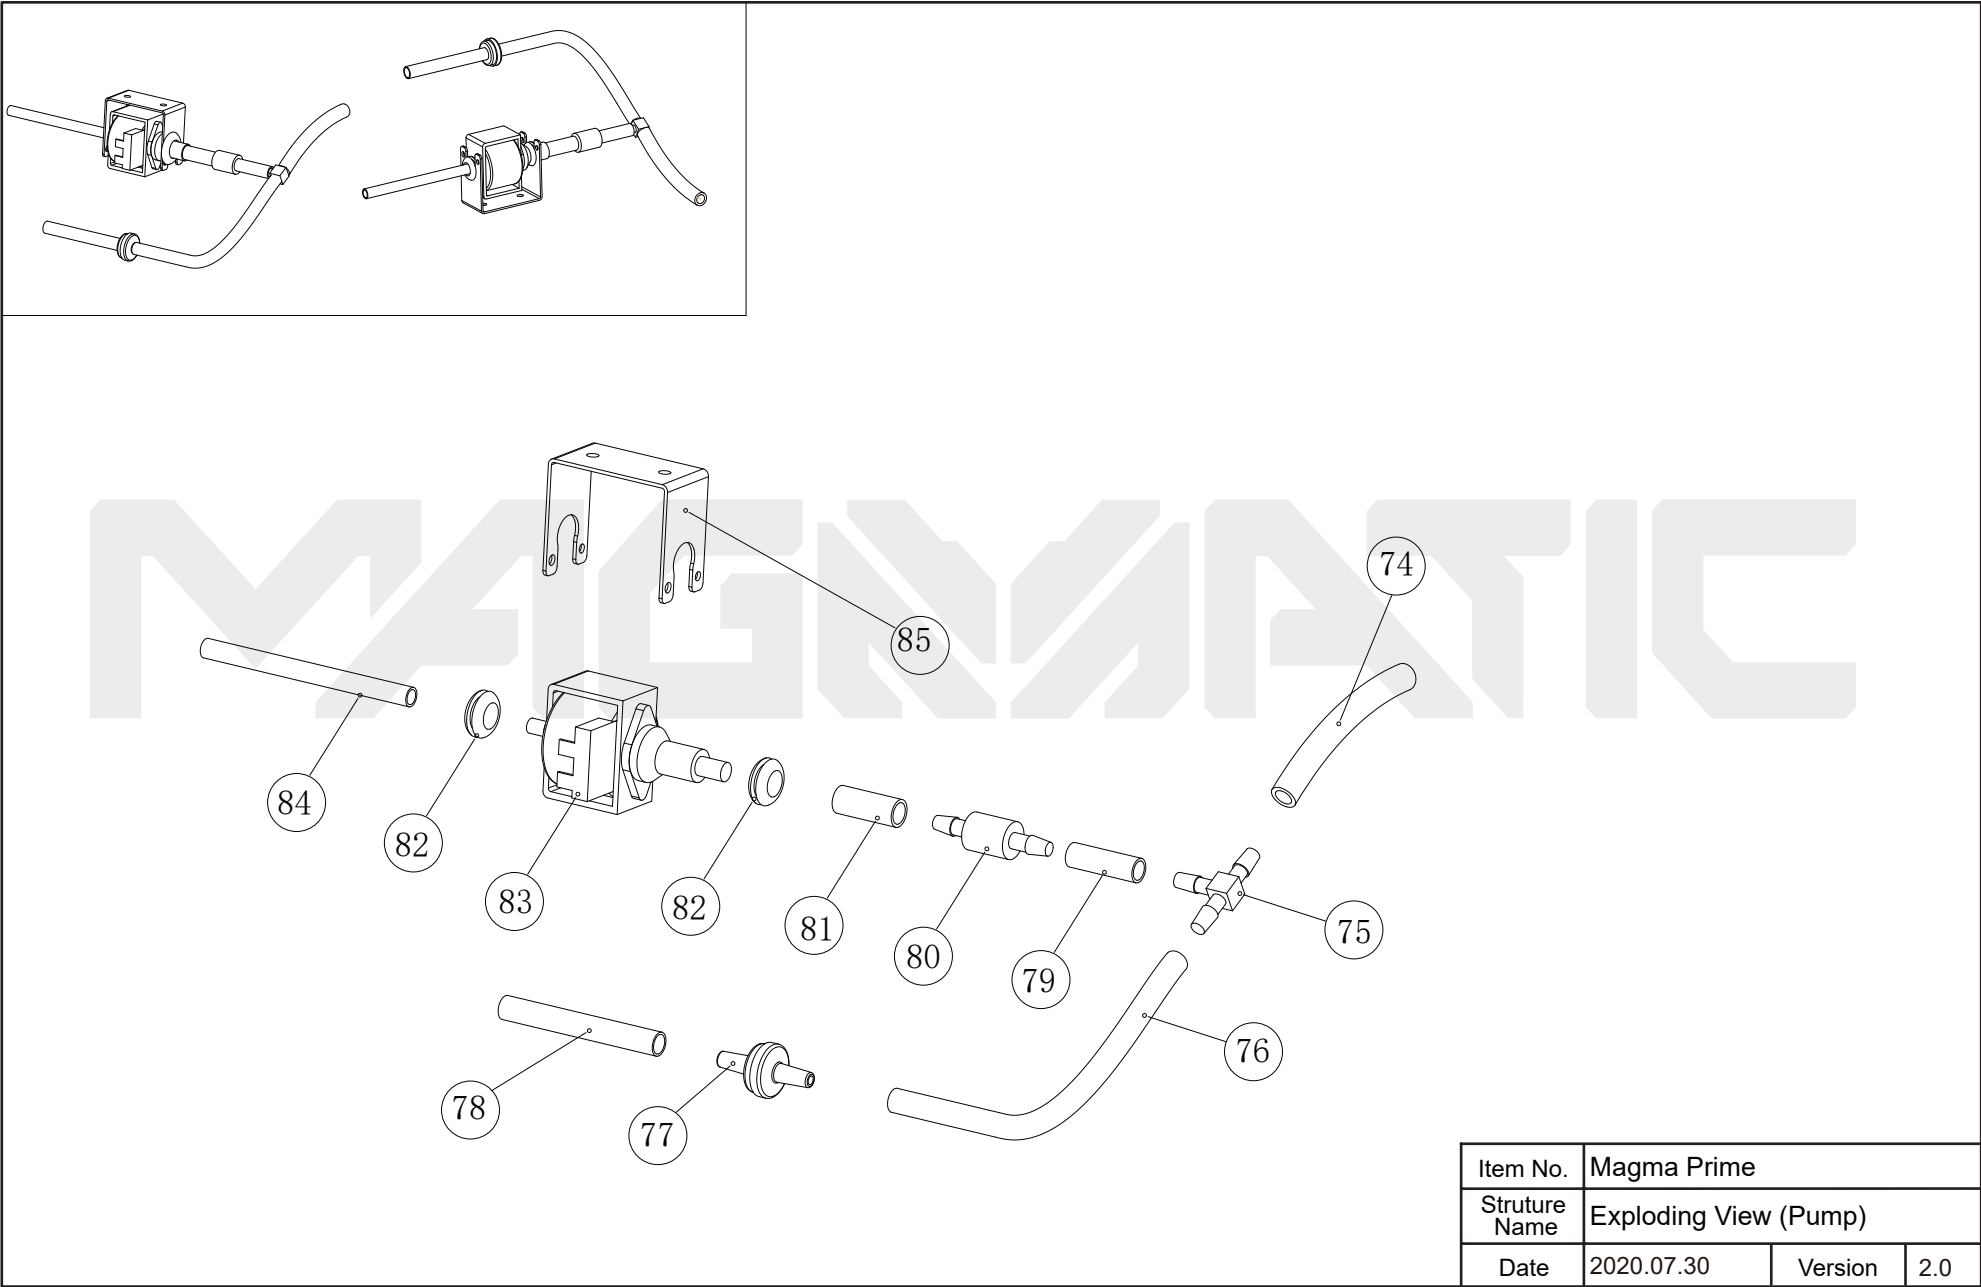

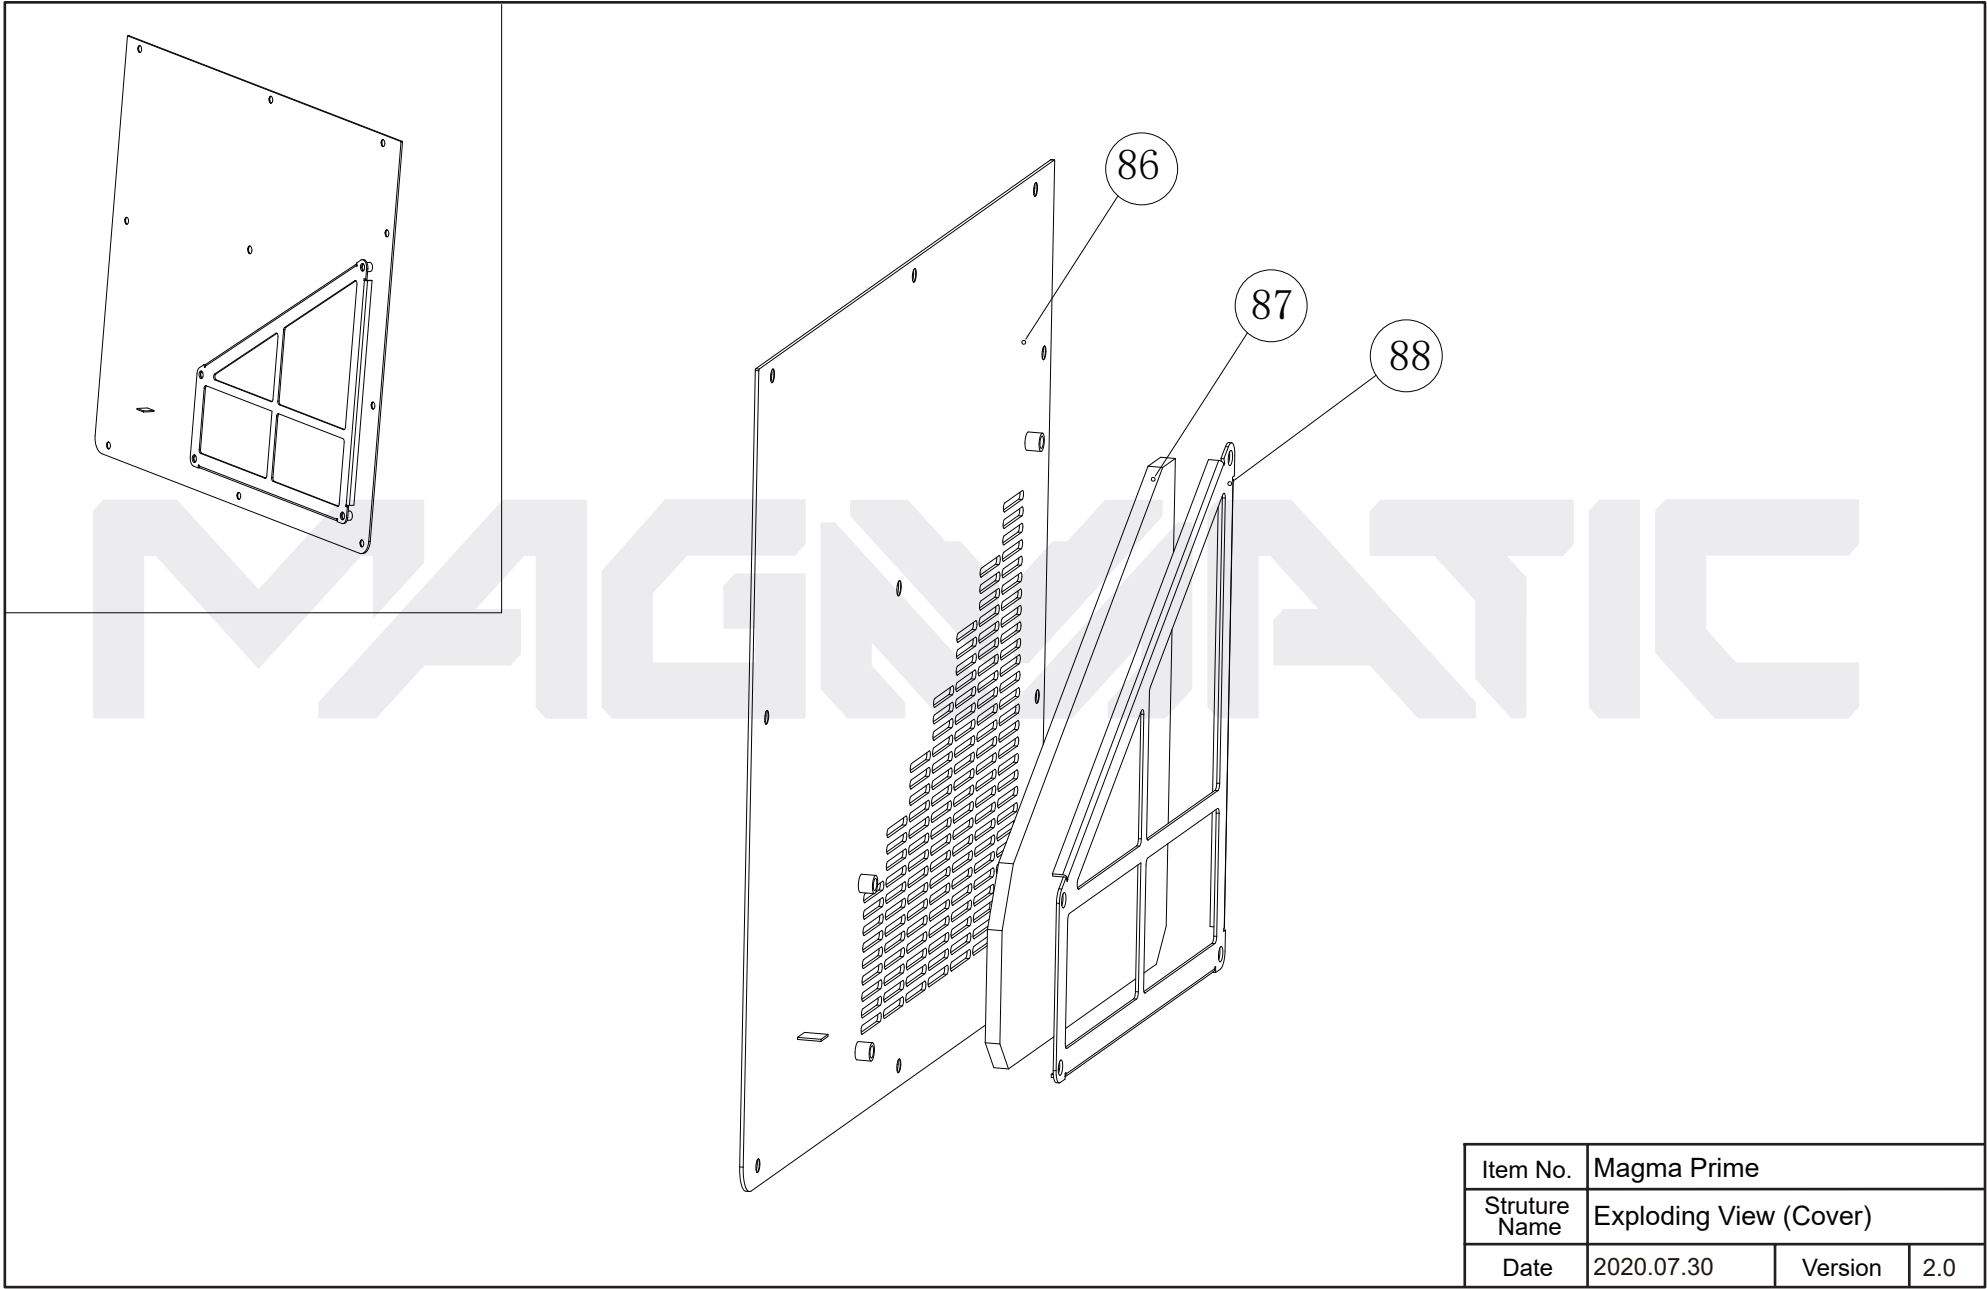


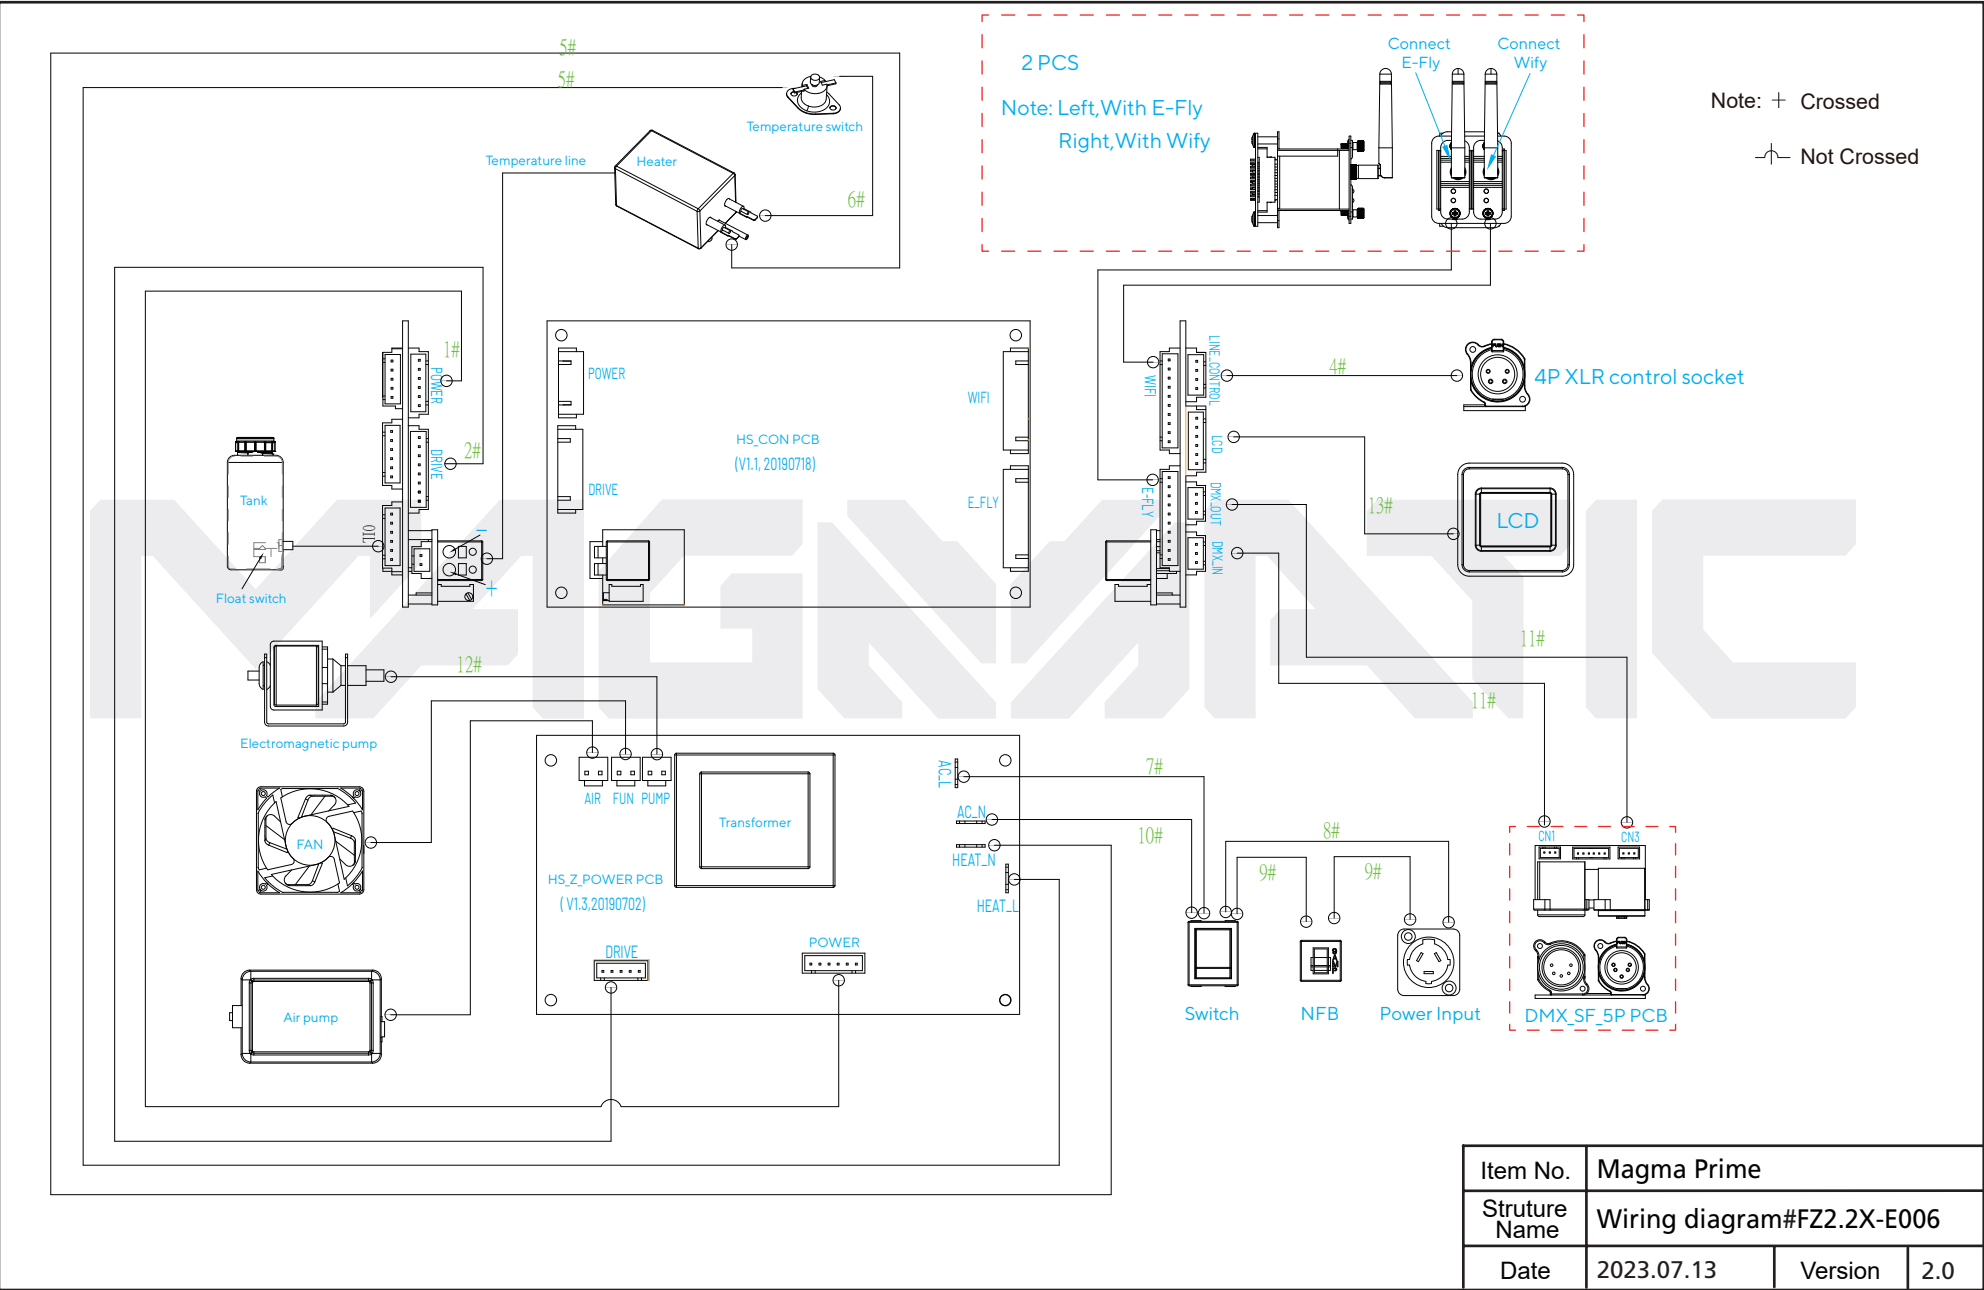

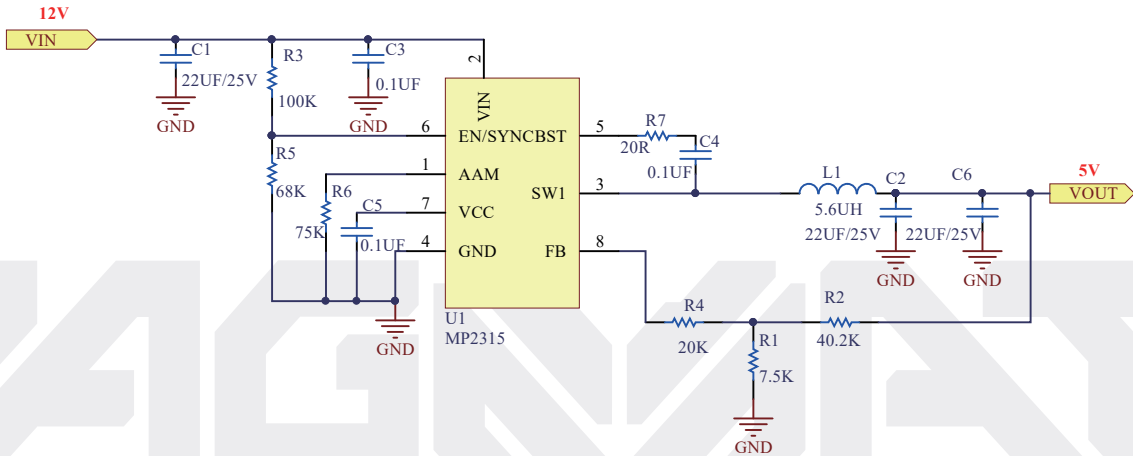


HS_SMP

Item No.	Magma Prime		
Struture Name	Circuitry of The PCB (HS_SMP)		
Date	2023.06.07	Version	1.0

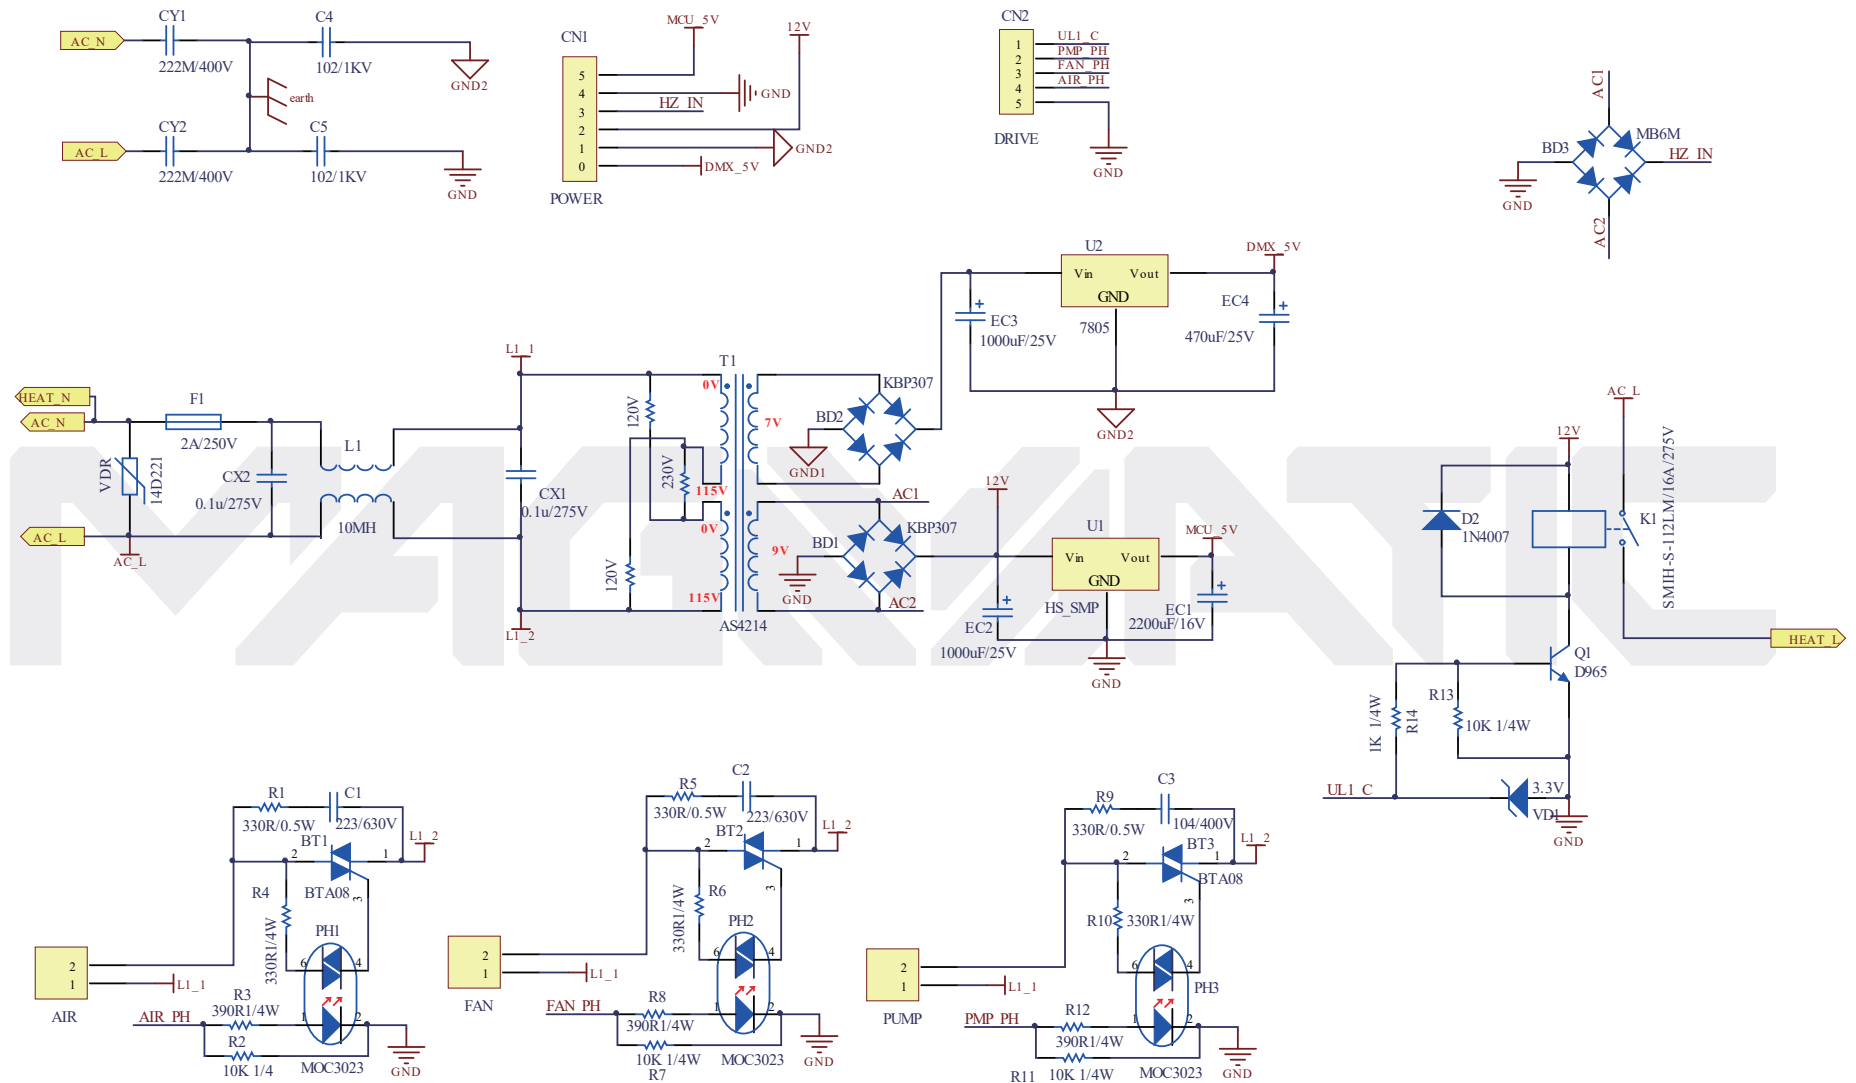


HS_Z_POWER

Item No.	Magma Prime		
Struture Name	Circuitry of The PCB (HS_Z_POWER)		
Date	2023.08.19	Version	1.0

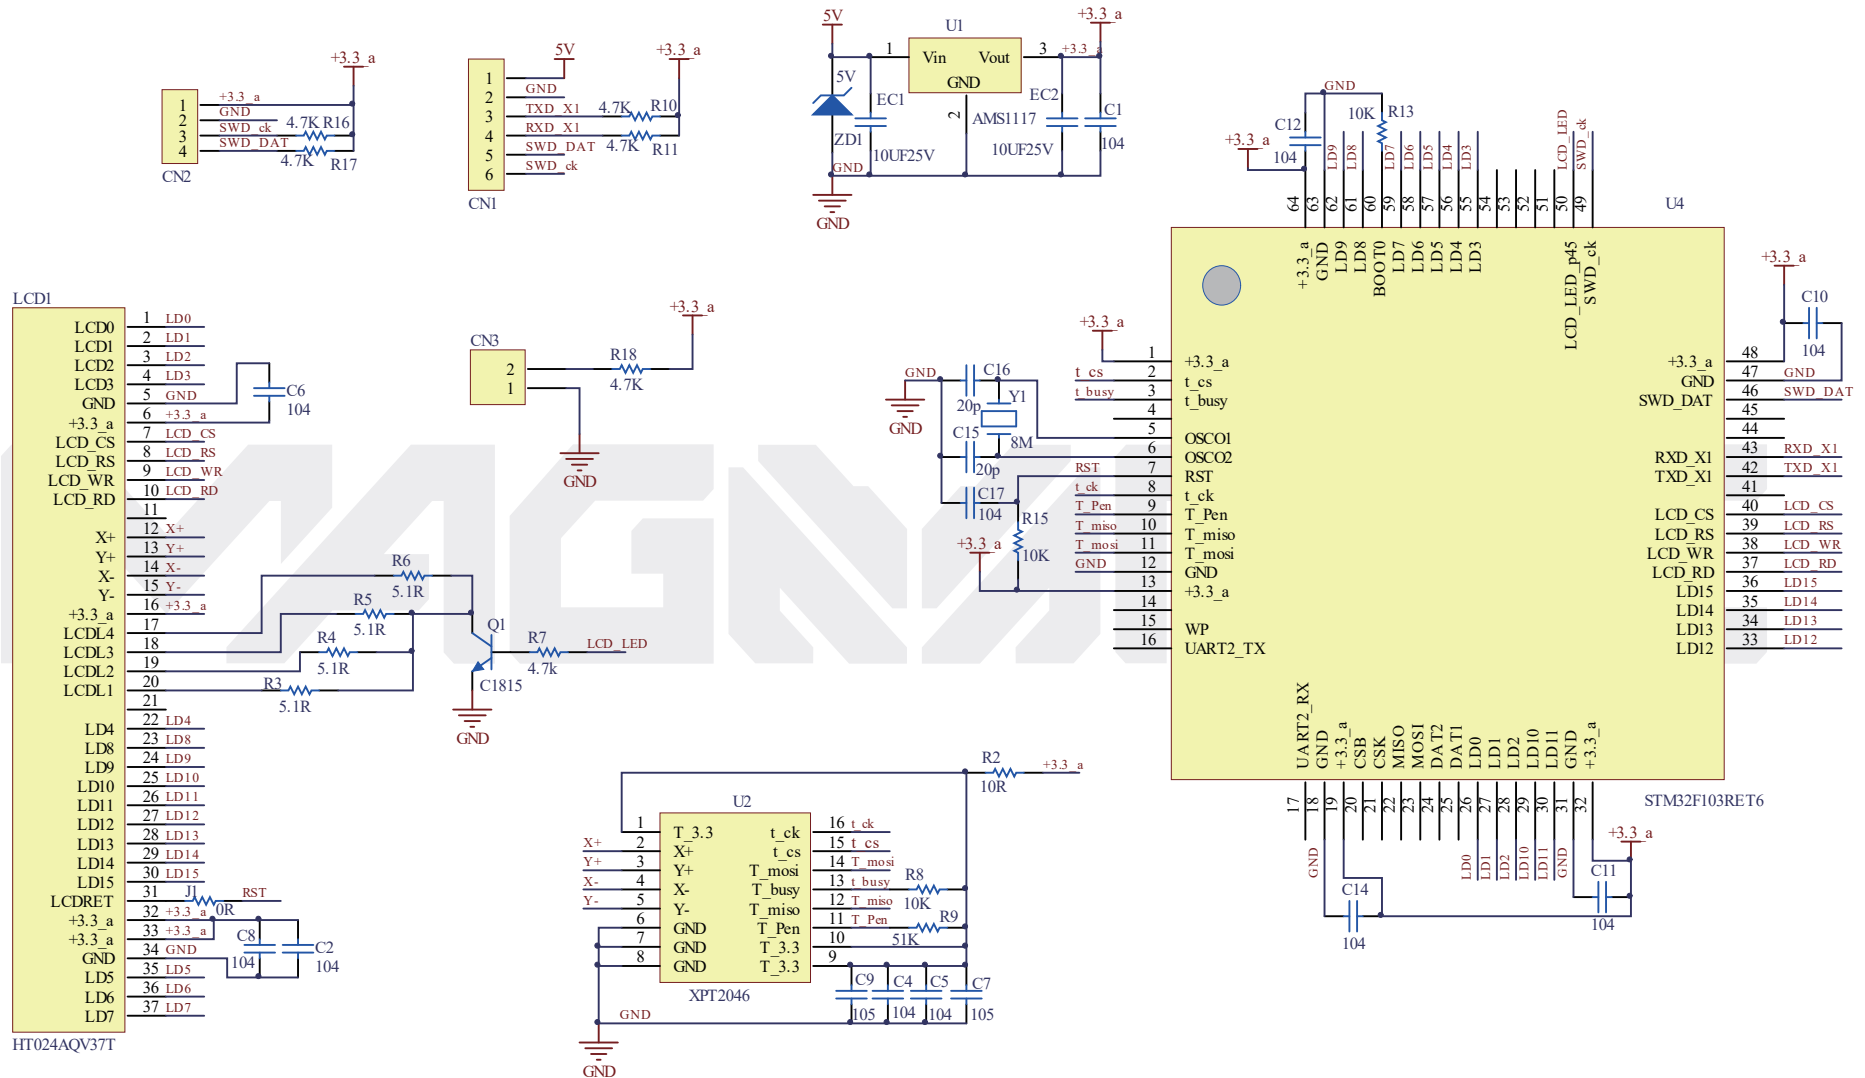


HS_LCD

Item No.	Magma Prime		
Struture Name	Circuitry of The PCB (HS_LCD)		
Date	2022.12.07	Version	1.0

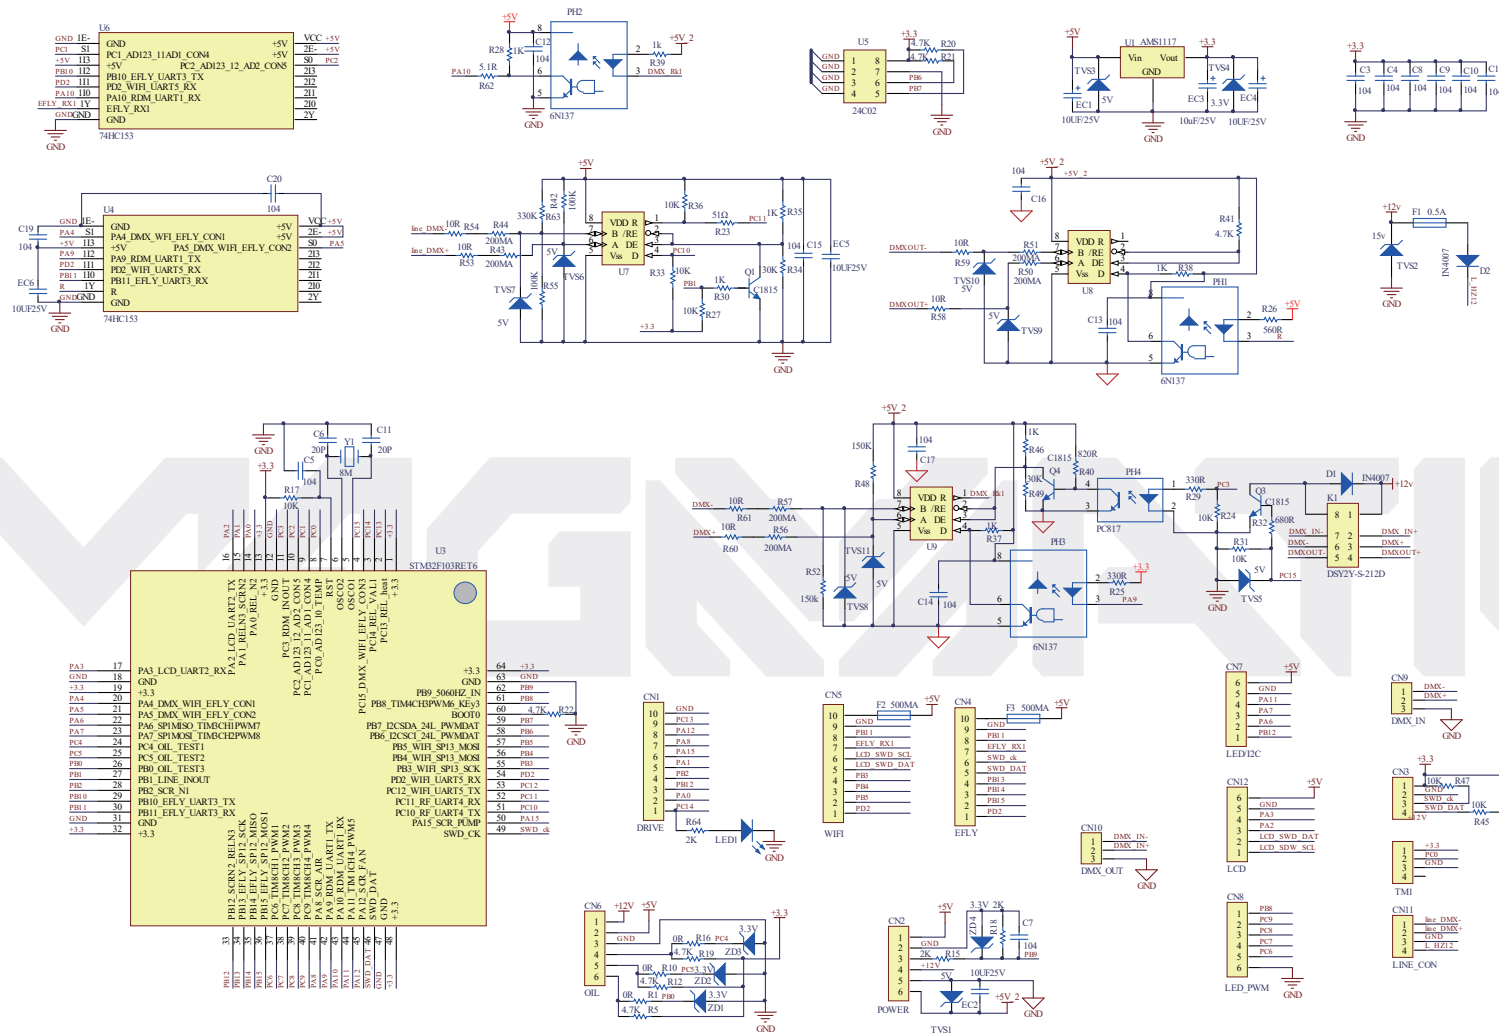

HS_CON

Item No.	Magma Prime		
Struture Name	Circuitry of The PCB (HS_CON)		
Date	2023.08.21	Version	1.0

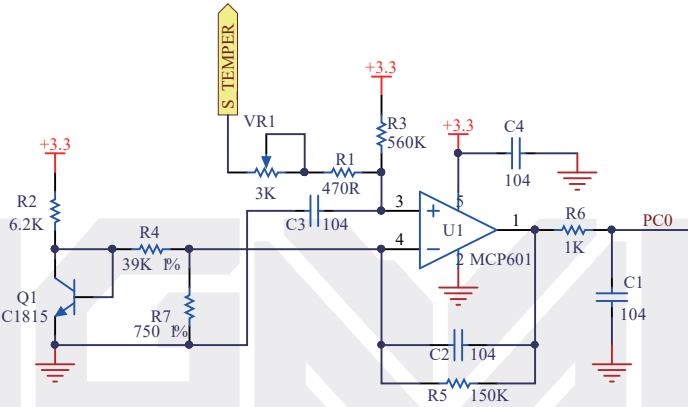

HS_TEMP

Item No.	Magma Prime		
Struture Name	Circuitry of The PCB (HS_TEMP)		
Date	2023.06.07	Version	1.0