

# **ELATION**<sup>®</sup>



**LIMELIGHT**

**PAR 5**

**User Manual**

©2025 ELATION PROFESSIONAL all rights reserved. Information, specifications, diagrams, images, and instructions herein are subject to change without notice. ELATION PROFESSIONAL logo and identifying product names and numbers herein are trademarks of ELATION PROFESSIONAL. Copyright protection claimed includes all forms and matters of copyrightable materials and information now allowed by statutory or judicial law or hereinafter granted. Product names used in this document may be trademarks or registered trademarks of their respective companies and are hereby acknowledged. All non-ELATION brands and product names are trademarks or registered trademarks of their respective companies.

**ELATION PROFESSIONAL** and all affiliated companies hereby disclaim any and all liabilities for property, equipment, building, and electrical damages, injuries to any persons, and direct or indirect economic loss associated with the use or reliance of any information contained within this document, and/or as a result of the improper, unsafe, insufficient and negligent assembly, installation, rigging, and operation of this product.

**Elation Professional USA | 6122 S. Eastern Ave. | Los Angeles, CA. 90040**

323-582-3322 | [www.elationlighting.com](http://www.elationlighting.com) | [info@elationlighting.com](mailto:info@elationlighting.com)

**Elation Professional B.V. | Junostraat 2 | 6468 EW Kerkrade, The Netherlands**

+31 45 546 85 66 | [www.elationlighting.eu](http://www.elationlighting.eu) | [info@elationlighting.eu](mailto:info@elationlighting.eu)

**Elation Professional Mexico | AV Santa Ana 30 | Parque Industrial Lerma, Lerma, Mexico 52000**

+52 (728) 282-7070

## DOCUMENT VERSION



Due to additional product features and/or enhancements, an updated version of this document may be available online. Please scan the QR Code with your mobile device or visit [www.elationlighting.com](http://www.elationlighting.com) for the latest revision/update of this manual, before installation and/or programming.

Date	Document Version	Software Version	DMX Channel Mode	Notes
04/10/24	1.0	1.01	4 / 12 / 15 / 13 / 17 Ext / 17 Std Zones / 25 Ch	Initial Release
04/22/24	1.1	N/C	No Change	Updated Control Panel, DMX Set Up
06/17/24	1.2	N/C	No Change	Updated Specifications
01/15/25	1.3	N/C	No Change	Updated Specifications
05/19/25	1.4	1.03	No Change	Updated General Information, RDM, System Menu, Fan Modes, DMX Traits; Removed Limited Warranty
07/24/25	1.5	N/C	No Change	Updated System Menu

# CONTENTS

<b>General Information</b>	<b>4</b>
<b>Limited Warranty (USA Only)</b>	<b>5</b>
<b>Safety Guidelines</b>	<b>6</b>
<b>Maintenance Guidelines</b>	<b>8</b>
<b>Overview</b>	<b>9</b>
<b>Installation Guidelines</b>	<b>10</b>
<b>Accessory Installation</b>	<b>14</b>
<b>Remote Device Management (RDM)</b>	<b>15</b>
<b>Control Panel</b>	<b>16</b>
<b>System Menu</b>	<b>17</b>
<b>Fan Modes</b>	<b>20</b>
<b>DMX Set Up</b>	<b>21</b>
<b>DMX Traits</b>	<b>23</b>
<b>Pixel Grouping</b>	<b>28</b>
<b>Virtual Color Table</b>	<b>29</b>
<b>Color Temperature Table</b>	<b>30</b>
<b>Dimmer Modes &amp; Curves</b>	<b>31</b>
<b>Primary-Secondary Set Up</b>	<b>32</b>
<b>Multi Unit Power Linking   Maintenance Guidelines</b>	<b>33</b>
<b>Torque Settings for Screws</b>	<b>34</b>
<b>IP Test Parameters</b>	<b>35</b>
<b>Dimensional Drawings</b>	<b>36</b>
<b>Specifications   Ordering Information</b>	<b>38</b>
<b>Error Codes   FCC Statement</b>	<b>39</b>

# GENERAL INFORMATION

## FOR PROFESSIONAL USE ONLY

### INTRODUCTION

Please read and understand the instructions in this manual carefully and thoroughly before attempting to operate this device. These instructions contain important safety and use information.

### COOLING

After usage, the lamp may be switched off, but the fixture should remain connected to power in order to allow the fan time to cool down the fixture.

### UNPACKING

Every device has been thoroughly tested and has been shipped in perfect operating condition. Carefully check the shipping carton for damage that may have occurred during shipping. If the carton is damaged, carefully inspect the device for damage, and be sure all accessories necessary to install and operate the device have arrived intact. In the event damage has been found or parts are missing, please contact our customer support team for further instructions. Please do not return this device to your dealer without first contacting customer support. Please do not discard the shipping carton in the trash. Please recycle whenever possible.

### BOX CONTENTS

Power Cable (x1)  
Safety Cable (x1)

### CUSTOMER SUPPORT

Contact ELATION Service for any product related service and support needs. Also visit [forums.elationlighting.com](https://forums.elationlighting.com) with questions, comments or suggestions.

**ELATION SERVICE USA - Monday - Friday 8:00am to 4:30pm PST**  
**323-582-3322 | Fax 323-832-9142 | [support@elationlighting.com](mailto:support@elationlighting.com)**

**ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET**  
**+31 45 546 85 63 | Fax +31 45 546 85 96 | [support@elationlighting.eu](mailto:support@elationlighting.eu)**

**REPLACEMENT PARTS** please visit [parts.elationlighting.com](https://parts.elationlighting.com)

### LIMITED WARRANTY

For up-to-date warranty information regarding your device, please visit Elation's warranty information page online or scan the QR codes below.



**USA:** <https://www.elationlighting.com/warranty-information>



**EU:** [https://www.elationlighting.eu/terms\\_and\\_conditions](https://www.elationlighting.eu/terms_and_conditions)

It is strongly recommended to power the fixture down completely when not in use. Doing so will reduce wear on the fixture due to sustained or extended operational periods, thereby maximizing its operational lifespan.

# IP65 RATED

**The International Protection (IP)** rating system is commonly expressed as “IP” (Ingress Protection) followed by two numbers (i.e. IP65), where the numbers define the degree of protection. The first digit (Foreign Bodies Protection) indicates the extent of protection against particles entering the fixture, and the second digit (Water Protection) indicates the extent of protection against water entering the fixture. An **IP65** rated lighting fixture is designed and tested to protect against the ingress of dust (**6**), and low-pressure water jets from any direction (**5**).

**Maritime/Coastal Environment Installations:** A coastal environment is seaside adjacent, and caustic to electronics through exposure to atomized salt-water and humidity, whereas maritime is anywhere within 5-miles of a coastal environment.

Maritime installations require additional preparation, and additional service intervals may be needed given the maritime use. In general, IP ratings presuppose freshwater conditions VS maritime conditions, which are typically more “caustic” to IP fixtures (both internally and externally). A duty-cycle may also be needed when units are not in use. During times of high humidity and colder temperatures, condensation may occur internally so the fixture may require a duty-cycle to bring it up to running temperature, allowing any accumulation of moisture to be expelled via the vent valve. Recommendations can change based on installation environmental circumstances.

**NOTE: NOT ALL FEATURES LISTED ARE AVAILABLE ON ALL FIXTURES; THE FOLLOWING INSTRUCTIONS MAY NOT APPLY. CONTACT SUPPORT FOR ADDITIONAL DETAILS.**

**Exterior Maintenance:** Inspect the exterior every 30-days. The unit must be powered off/disconnected. The chassis should be inspected for any signs of contaminants. Inspect optics to determine if the lens is obstructed, then clean optics and chassis accordingly. Based on initial finding, schedule maintenance accordingly, keeping in mind that exterior maintenance will be required. Even if the luminaires are NOT in use, maintenance will still be needed given its location (exterior use). The use of a durable type of wax on the chassis is recommended since it will help prevent contaminant build up. Inspect both power and data lines for any signs of contaminants or corrosion. Periodically reapplying di-electric grease, especially in coastal environments. If any signs of corrosion/contaminants are present, clean thoroughly, and/or replace connectors, then reapply di-electric grease. Typically, this should be done annually, or any time an opportunity presents itself. As a preventive measure, annual replacement of both vent valves is recommended. The vent valve membrane can become contaminated and/or clogged causing improper venting of humidity within the luminaire. Inspect all mounting hardware as a precaution.

**Interior Maintenance:** Inspect the interior every 30-days. The unit must be powered off/disconnected.

- Inspect zoom/focus mechanism, clean optics, lubricate linear bearings (Krytox oil) as needed, inspect belts for wear
- Inspect all rotating effect wheels, manually rotate them, note any resistance
- Inspect all remaining rotating belts for any wear
- Inspect all fans, clean as needed, check rotation, check connections
- Inspect CMY module, manually move flags and check for signs of resistance, and if needed, clean guide rods first, then reapply a thin layer of grease (moly lube)
- Clean interior with low-volume compressed air, then clean optics prior to reassembly of head covers

Although the base has limited moving parts, the pan belt should also be inspected for wear. Remember to always perform an IP test anytime a cover is removed.

There is no specific time frame regarding the routine replacement of parts such as belts/stepper motors, PCBs, or LEDs. These items should only be replaced on an as needed bases, except for cooling fans, which should be replaced once the luminaries reach 10,000-hours. This is a prophylactic measure intended to keep the unit running as cool as possible, insuring proper function of all internal components. A complete service breakdown is available, please contact [service@elationlighting.com](mailto:service@elationlighting.com) for any needed parts or manuals.

# SAFETY GUIDELINES

This fixture is a sophisticated piece of electronic equipment. To guarantee smooth operation, it is important to follow all instructions and guidelines in this manual. Elation Professional is not responsible for injury and/or damages resulting from the misuse of this fixture due to the disregard of the information printed in this manual. Only qualified and/or certified personnel should perform installation of this fixture and only the original rigging parts included with this fixture should be used for installation. Any modifications to the fixture and/or the included mounting hardware will void the original manufacturer's warranty and increase the risk of damage and/or personal injury.




**PROTECTION CLASS 1 - FIXTURE MUST BE PROPERLY GROUNDED.**



**THERE ARE NO USER SERVICEABLE PARTS INSIDE THIS UNIT. DO NOT ATTEMPT ANY REPAIRS YOURSELF. DOING SO WILL VOID YOUR MANUFACTURER'S WARRANTY. DAMAGES RESULTING FROM MODIFICATIONS TO THIS DEVICE AND/OR THE DISREGARD OF SAFETY INSTRUCTIONS AND GUIDELINES IN THIS MANUAL VOID THE MANUFACTURER'S WARRANTY AND ARE NOT SUBJECT TO ANY WARRANTY CLAIMS AND/OR REPAIRS.**



**DO NOT PLUG THIS UNIT INTO A DIMMER PACK  
DO NOT REMOVE THE COVER PANELS FOR ANY REASON  
NEVER OPERATE THIS UNIT WITH THE CASING REMOVED  
UNPLUG FROM POWER DURING LONG PERIODS OF NON-USE  
DISCONNECT POWER BEFORE PERFORMING MAINTENANCE**

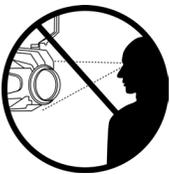

**NEVER LOOK DIRECTLY INTO THE LIGHT SOURCE!  
RETINA INJURY RISK - MAY INDUCE BLINDNESS!  
SENSITIVE PERSONS MAY SUFFER AN EPILEPTIC SHOCK!  
FIXTURE SHOULD BE PLACED A MINIMUM OF 1.0 FOOT (0.3 METERS) FROM ANY NEARBY OBJECTS OR SURFACES.**



**FIXTURE SHOULD BE PLACED A MINIMUM OF 1.6 FEET (0.5 METERS) FROM ANY FLAMMABLE MATERIALS.  
MAXIMUM AMBIENT OPERATING TEMPERATURE IS 113°F (45°C)**

# SAFETY GUIDELINES

**For Your Own Personal Safety, Please Read and Understand This Manual Completely Before You Attempt To Install Or Operate This Unit!**

- Do not touch the fixture housing during operation, as it may be hot.
- Do not shake the fixture, and avoid using brute force when installing and/or operating.
- Use only the original packaging and materials to transport or ship the fixture for service. Make sure to retain the original packaging for this purpose.
- Be sure that the local power outlet matches the required voltage for the device.
- Do not open up the device for any reason. There are no user serviceable parts inside.
- Disconnect the device's main power when left unused for long periods of time.
- Never connect this device to a dimmer pack.
- Do not attempt to operate this device if it has been damaged in any way.
- Never operate this device with the cover removed.
- Do not attempt to operate this device if the power cord has been frayed or broken.
- Never force a power cord connector into the fixture. If the power cord or any of its connectors are damaged, replace immediately with a new cord of the same power rating.
- Do not attempt to remove or break off the ground prong from the electrical cord. This prong is used to reduce the risk of electrical shock and fire in case of an internal short.
- Only handle the power cord by the plug end. Never disconnect the plug by tugging on the wire portion of the power cord.
- Disconnect from main power before making any type of connection.
- Never block the air ventilation slots. Always be sure to mount this device in an area that will allow proper ventilation. Allow about 6" (15cm) between this device and a wall.
- Always mount this unit in a safe and stable matter.
- Please route your power cord out of the way of foot traffic. Power cords should be routed so they are not likely to be walked on or pinched by items placed upon or against them.
- Before performing any servicing, turn off and disconnect the device from power and allow at least 15 minutes for the device to cool.
- Consistent operational breaks will ensure that this fixture will function properly for many years.
- The device should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged.
  - B. Objects have fallen on, or liquid has been spilled into, the device.
  - C. The device has been immersed in liquid.
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance.

**Keep all flammable materials away from this fixture!**

# MAINTENANCE GUIDELINES



**DISCONNECT POWER BEFORE PERFORMING ANY MAINTENANCE!**

## CLEANING

Frequent cleaning is recommended to ensure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean periodically with a soft cloth to avoid dirt/debris accumulation.

**NEVER** use alcohol, solvents, or ammonia-based cleaners.



## MAINTENANCE

Regular inspections are recommended to insure proper function and extended life. There are no user serviceable parts inside this fixture. Please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from an authorized Elation dealer.

Please refer to the following points during routine inspections:

- A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- Check for any deformations on the housing, color lenses, rigging hardware and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- Electric power supply cables must not show any damage, material fatigue or sediments.

# OVERVIEW

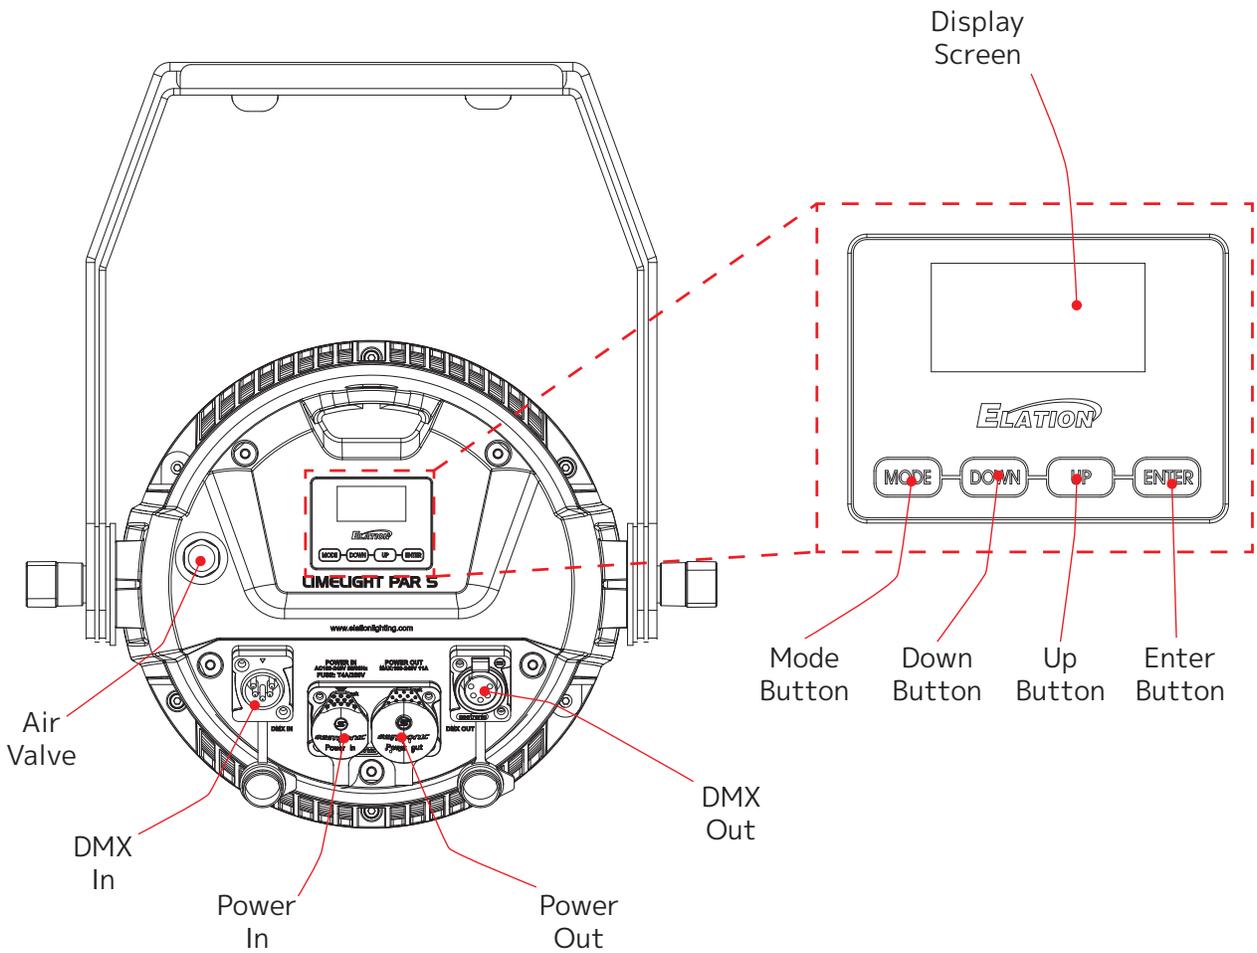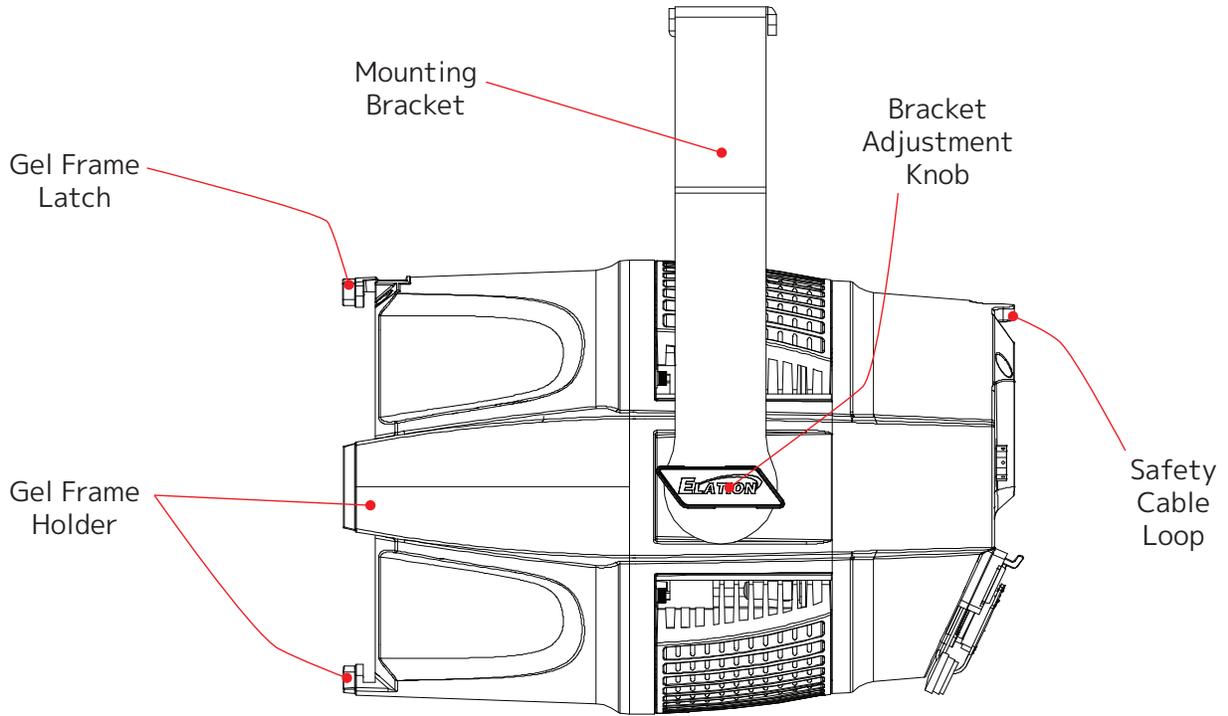

# INSTALLATION GUIDELINES



## **FLAMMABLE MATERIAL WARNING**

Keep fixture minimum 5.0 feet (1.5m) away from flammable materials and/or pyrotechnics.



## **ELECTRICAL CONNECTIONS**

A qualified electrician should be used for all electrical connections and/or installations.



## **MINIMUM DISTANCE TO OBJECTS/SURFACES IS 1 FOOT (0.3 METERS)**



## **MINIMUM DISTANCE OF FLAMMABLE MATERIALS FROM THE SURFACE IS 1.6 FEET (0.5 METER)**



## **MAXIMUM AMBIENT TEMPERATURE 113° F (45°C)**



## **DO NOT INSTALL THE FIXTURE IF YOU ARE NOT QUALIFIED TO DO SO!**

Fixture **MUST** be installed following all local, national, and country commercial electrical and construction codes and regulations.

Before rigging/mounting a single fixture or multiple fixtures to any metal truss/structure or placing the fixture(s) on any surface, a professional equipment installer **MUST** be consulted to determine if the metal truss/structure or surface is properly certified to safely hold the combined weight of the fixture(s), clamps, cables, and accessories.

Fixture(s) should be installed away from walking paths, seating areas, or areas where unauthorized personnel might reach the fixture by hand.

**NEVER** stand directly below the fixture(s) when rigging, removing, or servicing.


Overhead fixture installation must always be secured with a secondary safety attachment, such as an appropriately rated safety cable.

Allow approximately 15 minutes for the fixture to cool down before servicing.

# INSTALLATION GUIDELINES

## OMEGA BRACKET WITH CLAMP INSTALLATION

When mounting the fixture to a truss, secure an appropriately rated professional grade rigging clamp to the Omega Bracket by inserting and appropriately sized bolt through both clamp and Omega bracket, then fasten them together using a matching bolt. Attach the Omega bracket to the fixture using the attachment points located on the top of the mounting bracket. Attach a safety cable of the appropriate weight rating to one of the provided attachment points: either on the rear panel of the fixture above the display screen, or at the base of the mounting bracket.

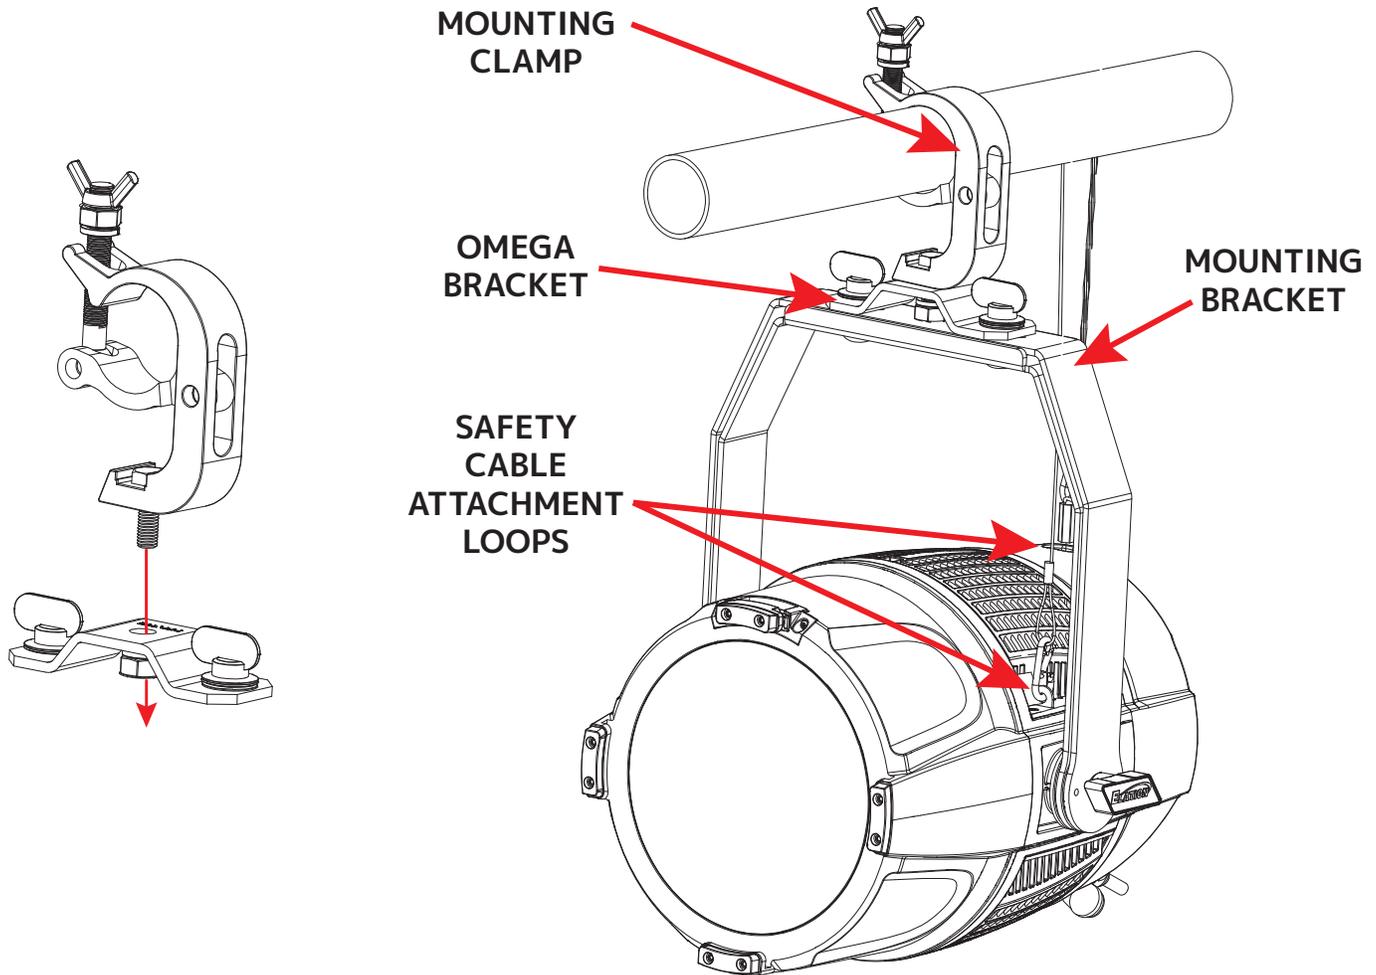


**ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THAT THE FIXTURE WILL NOT FALL IF THE CLAMP FAILS.**

# INSTALLATION GUIDELINES

## FIXTURE INSTALLATION

This fixture is fully operational in three different mounting positions: hanging upside-down, mounted sideways on trussing, or set on a flat level surface. Be sure this fixture is kept well away from any flammable materials (decoration etc.). Always use and install a safety cable of the proper rating as a safety measure to prevent accidental damage and/or injury in the event the clamp fails.

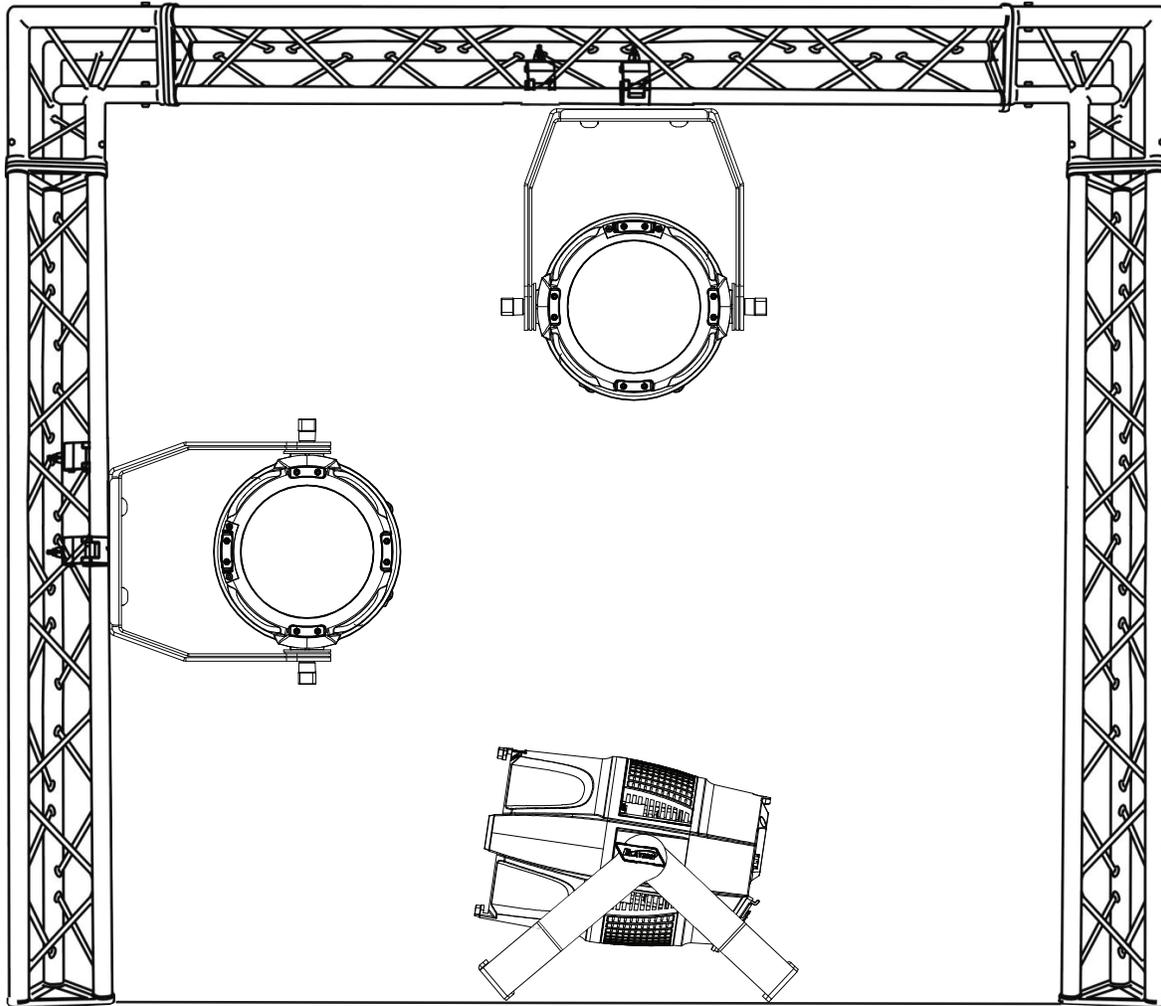

**FALLING FIXTURES CAN CAUSE SEVERE INJURY OR SERIOUS EQUIPMENT DAMAGE! FOR THIS REASON, FIXTURES SHOULD BE INSTALLED AND INSPECTED ONLY BY QUALIFIED PERSONNEL. DO NOT INSTALL THE UNIT IF YOU LACK THE QUALIFICATIONS TO DO SO, OR IF YOU HAVE DOUBTS ABOUT THE SAFETY AND SECURITY OF THE INSTALLATION SETUP OR LOCATION!**



**ALWAYS ATTACH A SAFETY CABLE WHENEVER INSTALLING THIS FIXTURE IN A SUSPENDED ENVIRONMENT TO ENSURE THE FIXTURE WILL NOT FALL IF THE CLAMP FAILS.**



**IF FIXTURE IS INSTALLED WITH ACCESSORIES FITTED, THE FIXTURE SHOULD ALWAYS BE INSTALLED WITH THE GEL FRAME LATCH ORIENTED UPWARDS, IN ORDER TO ENSURE THAT THE ACCESSORIES WILL NOT FALL IN THE EVENT THAT THE LATCH FAILS**


# INSTALLATION GUIDELINES

## POTENTIAL INTERNAL FIXTURE DAMAGE FROM EXTERNAL SOURCES OF LIGHT BEAMS

External sources of light beams from direct sunlight, lighting moving head fixtures, and lasers, which are focused directly towards the exterior housing and/or penetrate the front lens opening of ELATION lighting fixtures, can cause severe internal damage including burning to optics, dichroic color filters, glass and metal gobos, prisms, animation wheels, frost filters, iris, shutters, motors, belts, wiring, discharge lamps, and LEDs.

This issue is not specific only to ELATION lighting fixtures, it is a common issue with lighting fixtures from all manufacturers. Although there is no true way to fully prevent this issue from happening, the guidelines below can prevent any potential damage from occurring if followed. Contact ELATION Service for more details.

**DO NOT EXPOSE THE FIXTURE AND/OR FRONT LENS OPENING TO LIGHT BEAMS FROM DIRECT SUNLIGHT, OTHER LIGHTING MOVING HEAD FIXTURES, AND LASERS WHILE UNPACKING, INSTALLATION, USE, AND EXTENDED IDLE TIMES OUTDOORS. DO NOT FOCUS A LIGHT BEAM FROM ONE LIGHTING FIXTURE DIRECTLY TOWARDS ANOTHER.**


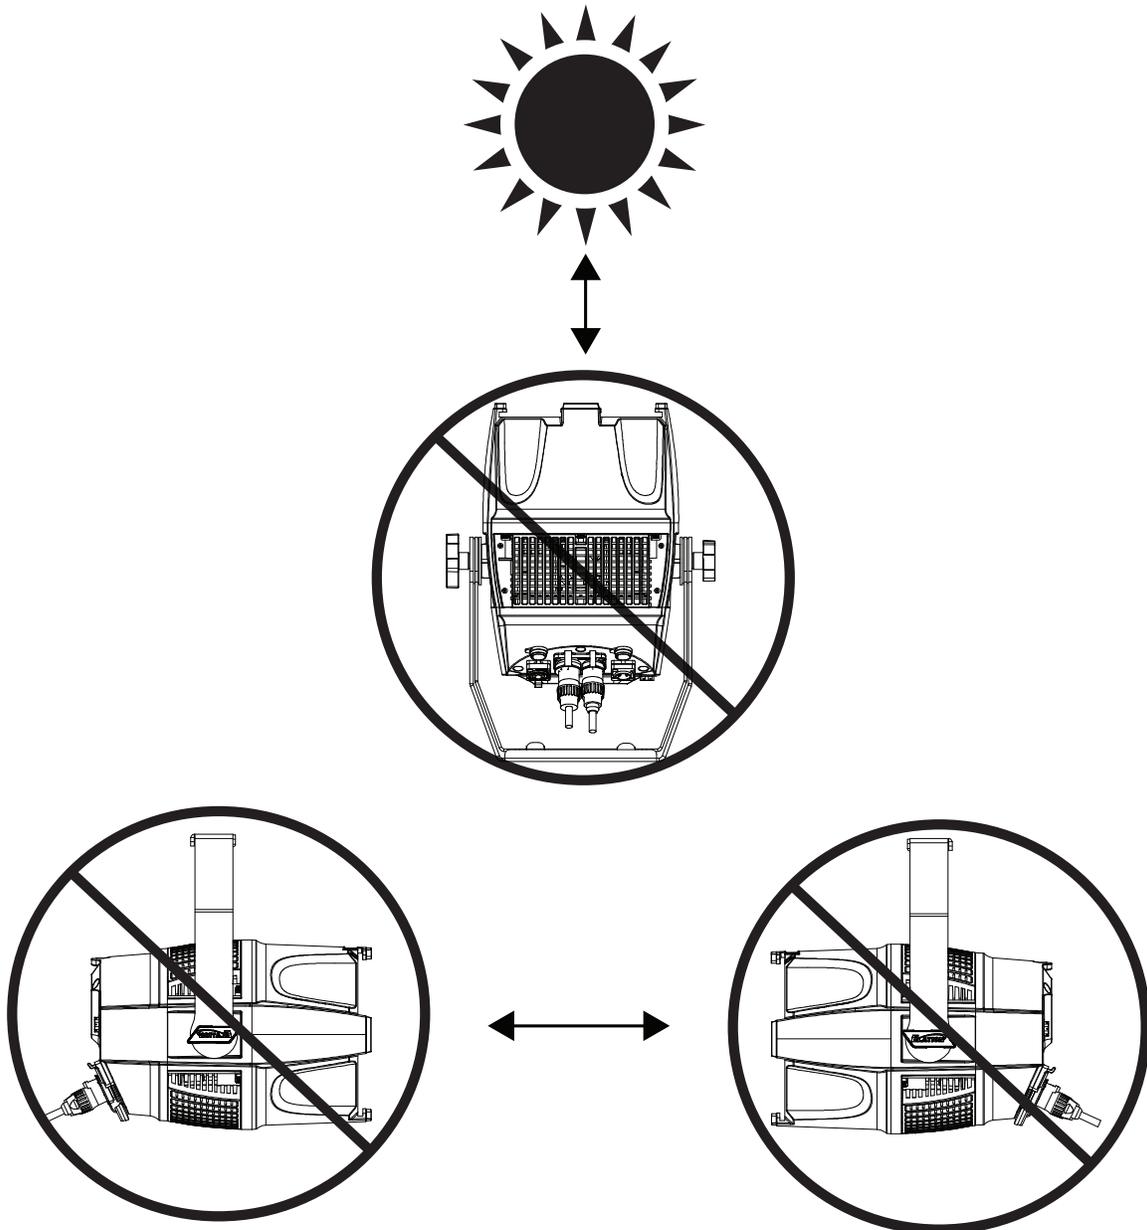


# ACCESSORY INSTALLATION


## GEL FRAME AND BARNDOORS

This fixture can be fitted with an optional gel frame and an optional set of barndoors. Follow the instructions below to install these accessories.

1. Open the gel frame latch and slide the gel frame into place in front of the fixture's lens.
2. Slide the barndoors into place in front of the gel frame. Close the gel frame latch to secure the accessories in place.

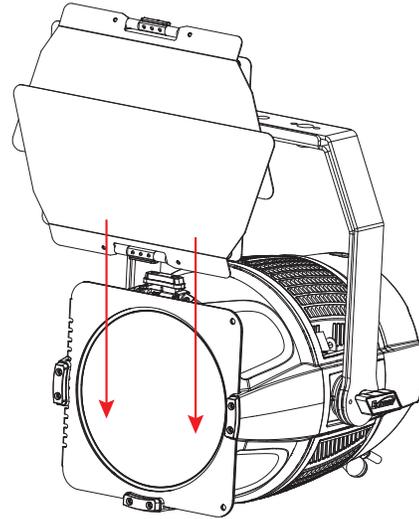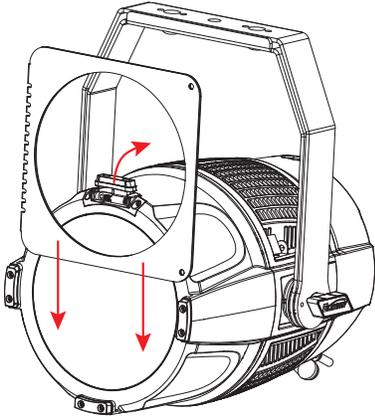

3. If the fixture is being installed in an overhead location, such as hanging from a truss, the barndoors must be secured with their own independent safety cable. The safety cable attachment points can be found at the base of the barndoor unit near where it comes into contact with the fixture. Additionally, always orient the unit with the gel frame latch facing upwards, so that the accessories will not fall in the event that the latch fails.

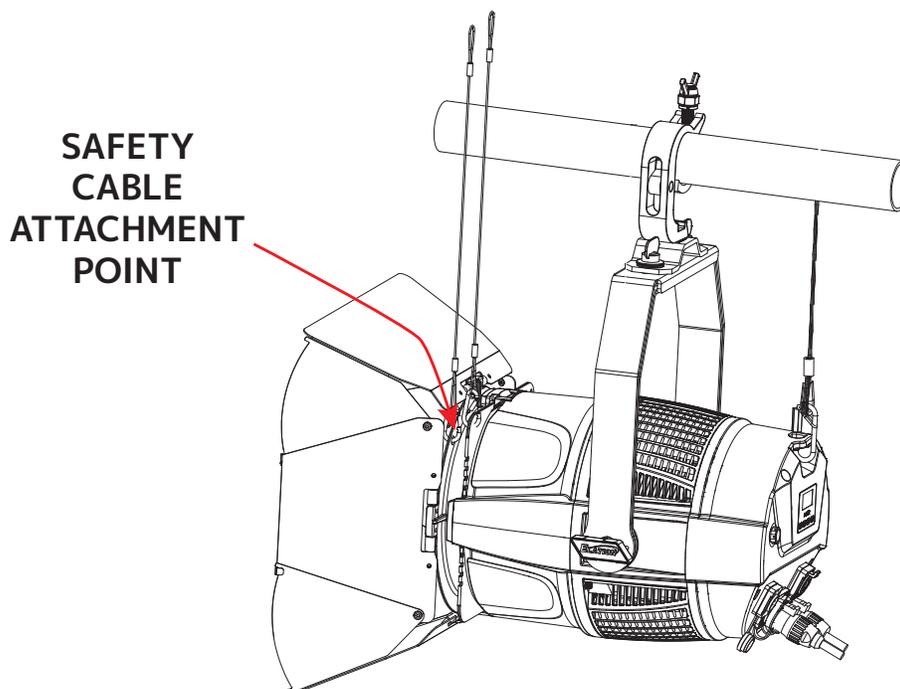

# REMOTE DEVICE MANAGEMENT (RDM)

**NOTE: In order for RDM to work properly, RDM enabled equipment must be used throughout the entire system, including DMX data splitters and wireless systems.**

Remote Device Management (RDM) is a protocol that sits on top of the DMX512 data standard for lighting, and allows the DMX systems of the fixtures to be modified and monitored remotely. This protocol is ideal for instances in which a unit is installed in a location that is not easily accessible.

With RDM, the DMX512 system becomes bi-directional, allowing a compatible RDM enabled controller to send out a signal to devices on the wire, as well as allowing the fixture to respond (known as a GET command). The controller can then use its SET command to modify settings that would typically have to be changed or viewed directly via the unit's display screen, including the DMX Address, DMX Channel Mode, and Temperature Sensors.

## FIXTURE RDM INFORMATION:

Device ID	Device Model ID	RDM Code	Personality ID
0000-FFFF	0052	0x22A6	4Ch, 12Ch, 15Ch, 13Ch, 17Ch-A, 17Ch-B, 25Ch

Please be aware that **not all RDM devices support all RDM features**, and therefore it is important to check beforehand to ensure that the equipment that you are considering includes all of the features that you require.

The following parameters are accessible in RDM on this device:


CODE	PARAMETER	CODE	PARAMETER
0x1031	Preset Playback	0x00E0	DMX Personality
0x0122	Default Slot Value	0x00E1	DMX Personality Description
0x00C2	Boot Software Version Label	0x0400	Device Hours
0x00C1	Boot Software Version ID	0x0015	Comms Status
0x0070	Product Detail ID List	0x0031	Status ID Description
0x0030	Status Messages	0x0032	Clear Status ID
0x0011	Proxied Device Count	0x0405	Device Power Cycles
0x0200	Sensor Definition	0x0500	Display Invert
0x0201	Sensor Value	0x0501	Display Level
0x0080	Device Model Description	0x0603	Real Time Clock
0x0081	Manufacturer Label	0x1010	Power State
0x0082	Device Label	0x0020	Queued Message

# CONTROL PANEL

The fixture includes an easy to navigate system menu. The control panel display is located on the rear panel of the fixture (see image below) and provides access to the main system menu, where all necessary system adjustments are made to the fixture. During normal operation, you can navigate through the different menu options with the DOWN and UP buttons. To select the option shown on the screen, press the ENTER button, then use the DOWN and UP buttons to adjust the field. Pressing the ENTER button once more will confirm the setting. Exit the main menu at any time without making any adjustments by pressing the MENU button.

The control panel also features a battery charge indicator near the control buttons, as well as a service port for updating the device's software (see the note below).

In default setting, the screen will remain on as long as that device is connected to power. However, it can be configured to lock after a certain period of inactivity by navigating to Settings > Display > Screen Lock in the System Menu. To unlock the device, press and hold the UP, DOWN, UP, DOWN, ENTER.

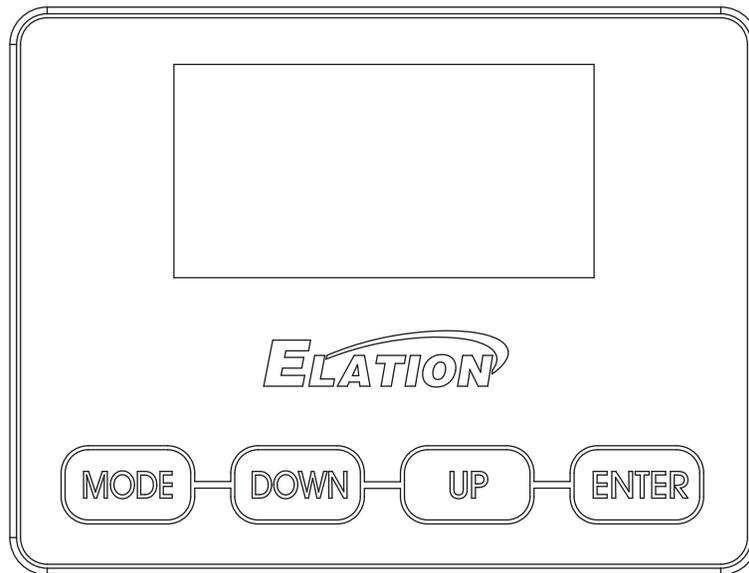

**PLEASE NOTE:** For units installed in an outdoor setting, the display screen and control panel may interpret a raindrop as a command input and change the fixture's setting (phantom touch) if the display screen is not locked. **The default setting for this unit is to have the display screen unlocked (Settings > Display > Screen Lock > Off).** Therefore, to avoid unintentional command inputs, the Screen Lock setting should be configured so that the screen and control will lock after the selected period of inactivity.

**SOFTWARE UPDATE: AN ELATION C-LOADER II CAN BE USED TO UPDATE THE FIXTURE TO THE LATEST SOFTWARE.** To order this device, please contact Elation Support for further details.

**ELATION SERVICE USA - Monday - Friday 8:00am to 4:30pm PST**  
323-582-3322 | Fax 323-832-9142 | support@elationlighting.com

**ELATION SERVICE EUROPE - Monday - Friday 08:30 to 17:00 CET**  
+31 45 546 85 63 | Fax +31 45 546 85 96 | support@elationlighting.eu

# SYSTEM MENU

ELATION LIMELIGHT PAR S				
DMX	DMX Address	001 - 512		Set DMX address
	DMX Mode	4Ch RGB		Select DMX channel mode
		12Ch CMY		
		15Ch CMY Extended		
		<b>13Ch Standard</b>		
		17Ch Extended		
		17Ch Standard Zones		
	25Ch Extended Zones			
	No DMX Status	<b>Hold Last</b>		Fixture holds last settings received if DMX signal is lost or interrupted
		Fade to Black		Fixture takes all channels to 0 if DMX signal is lost or interrupted
Standalone		Fixture defaults to standalone mode if DMX signal is lost or interrupted		
Protocol	Select Signal	<b>DMX</b>	Select signal protocol	
		Aria In - DMX Out		
		DMX In - Aria Out		
Aria	Aria Channel	0 - 14	Select Aria channel	
CONTROL	Manual Control	Dimmer	000% - <b>100%</b>	Manually configure each parameter
		Red	0 - <b>255</b>	
		Green	0 - <b>255</b>	
		Blue	0 - <b>255</b>	
		Lime	0 - <b>255</b>	
		CCT	2400K - 8500K Default = <b>6000K</b>	
		Green Shift	-100% ~ +100% Default = <b>0</b>	
		Virtual Color	see <b>Color Macros Table</b> section	
	Zoom	000% - 100% Default = <b>50%</b>		
	Primary	On / <b>Off</b>		Set unit as primary
Secondary	On / <b>Off</b>		Set unit as secondary	
Zoom Speed	<b>Fast</b> / Smooth		Set zoom speed	

# SYSTEM MENU

ELATION LIMELIGHT PAR S				
CONTROL (continued)	Reset Zoom	Yes / <b>No</b>		Reset zoom position
	Self Test	All		Run the selected self test
		Dimmer		
		Color		
Zoom				
SETTINGS	Dim Modes	<b>Standard</b>		Select dim mode
		Stage		
		TV		
		Architectural		
		Theatre		
		Stage 2		
		Dim Speed	0s - 10s Default = <b>0.1s</b>	Set dim speed
	Dim Curves	Linear		Select dim curve
		Square		
		Square Inverse		
		<b>S-Curve</b>		
	LED Refresh Rate	900Hz - 1500Hz, 2500Hz, 4000Hz, 5000Hz, 6000Hz, 10KHz, 15KHz, 20KHz, 25KHz Default = <b>1200Hz</b>		Set LED refresh rate
	LED Power Limit	50%		Set LED power output limitation
		60%		
		70%		
80%				
90%				
<b>100%</b>				
Fans Mode	<b>Auto</b>		Set fan mode	
	High			
	Silent			
	Mute			
Display	Screen Delay	10s - 5min Default = <b>1min</b>	Screen goes into standby mode after selected period of inactivity	
	Screen Lock	<b>Off</b> , 10s - 5min, Key Lock	Screen and controls lock after selected period of inactivity	
	Rotate Display	Yes		Select display orientation
<b>No</b>				
Auto				
Reset Defaults	Yes / <b>No</b>		Return unit to factory default settings	

# SYSTEM MENU

ELATION LIMELIGHT PAR S					
<b>INFORMATION</b>	Time	Current Run Time		Display current fixture run time	
		Total Run Time		Display total lifetime fixture run time	
		Last Run Time		Display fixture run times since last reset	
	Temperature	Current		Current fixture temperature	
		Max Resettable		Max recorded fixture temperature since last reset	
	Humidity	xx% RH		Display current humidity	
	DMX Values	Red		Display current DMX value of selected parameter	
		Green			
		...			
	Product IDs	RDM UID		Display RDM UID	
Error Logs	Fixture Errors		Display recorded fixture errors one by one		
Software Version	Vx.x		Display current software version		
<b>SERVICE (Passcode = 050)</b>	Aria Activation	<b>On / Off</b>		Activate or deactivate Aria	
	Calibration	Red	000 - 255		Calibrate each parameter
		Green	000 - 255		
		Blue	000 - 255		
		Lime	000 - 255		
		Red2	000 - 255		
		Green2	000 - 255		
		Blue2	000 - 255		
		Lime2	000 - 255		
	Zoom	000 - 255			
Reset Last Run	Yes / No		Reset Last Run Time and Max Resettable Temperature		
Reset Error Logs	Yes / No		Clear Error Logs		

# FAN MODES

The Limelight Par S is a high-performance fixture suited for multiple applications. For noise critical environments such as Theater, Opera, or Orchestral Halls, it offers various fan operation modes which remove unwanted noise distractions for the audience and performers. Fan Modes can be changed remotely via the DMX control channel, allowing the fixture to offer high output or whisper-silent operation at a moment's notice. All Fan Modes smoothly transition over a brief time, preventing unwanted attraction to the fixture.

**Auto (Default)** – Fans only run at the speeds needed to keep the LED engine within a safe temperature range, and ensures optimal performance of the fixture. They will turn off if possible; for example, when the fixture is dimmed to a low intensity. Fans sense the ambient and fixture temperature and will, at all times, try to keep noise levels at a minimum. The fixture output will only be reduced when the LED engine cannot be cooled to its safe operating range due to a high ambient temperature.

**NOTE: This mode is recommended for daily operation.**

**Silent** – Fan speeds are reduced throughout the fixture for a lower noise profile. The fixture output is also reduced to approximately 80%. This mode should be sufficient for most uses where lower noise is required.

**Mute** – All but one fixture fan is turned off for whisper-quiet operation. The fixture LED power output is reduced to 25%.

**High** – Fan speeds are increased throughout the fixture for the most efficient cooling. This mode will increase wear on the fans and should only be utilized in exceptional circumstances. Fans will always run, even if the fixture is dimmed. Fixture output is kept at 100% unless the LED engine temperature reaches an unsafe temperature, at which point the fixture will reduce power carefully to ensure continued safe operation. This mode is only required in very high ambient temperatures when automatic fan speed adjustments are not desired.


# DMX SETUP

**DMX-512:** DMX is short for Digital Multiplex. This is a universal protocol used as a form of communication between intelligent fixtures and controllers. A DMX controller sends DMX data instructions from the controller to the fixture. DMX data is sent as serial data that travels from fixture to fixture via the DATA "IN" and DATA "OUT" XLR terminals located on all DMX fixtures (most controllers only have a DATA "OUT" terminal).

**DMX Linking:** DMX is a language allowing all makes and models of different manufacturers to be linked together and operate from a single controller, as long as all fixtures and the controller are DMX compliant. To ensure proper DMX data transmission, try to use the shortest cable path possible when linking several DMX fixtures. The order in which fixtures are connected in a DMX line does not influence the DMX addressing. For example, a fixture assigned a DMX address of 1 may be placed anywhere in a DMX line: at the beginning, at the end, or anywhere in the middle. When a fixture is assigned a DMX address of 1, the DMX controller knows to send DATA assigned to address 1 to that unit, no matter where it is located in the DMX chain.


**Data Cable (DMX Cable) Requirements (For DMX Operation):** This unit can be controlled via DMX-512 protocol. The DMX address is set on the rear panel of the unit. Your unit and your DMX controller require a standard 5-pin XLR connector for data input and data output. We recommend Accu-Cable DMX cables. If you are making your own cables, be sure to use standard 110-120 Ohm shielded cable (This cable may be purchased at almost all pro lighting stores). Your cables should be made with a male XLR connector at one end and a female XLR connector at the other. Also remember that DMX cable must be daisy chained and cannot be split.

**Notice:** Be sure to follow the illustration below when making your own cables. Do not use the ground lug on the XLR connector. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behavior.

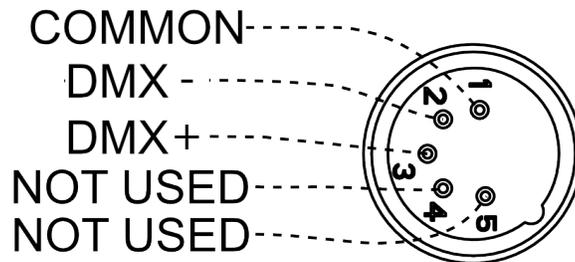

# DMX SETUP

**Special Note: Line Termination.** When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behavior. A terminator is a 110-120 ohm 1/4 watt resistor which is connected between pins 2 and 3 of a male XLR connector (DATA + and DATA -). This unit is inserted in the female XLR connector of the last unit in your daisy chain to terminate the line. Using a cable terminator (ADJ part number Z-DMX/T) will reduce the risk of erratic behavior.

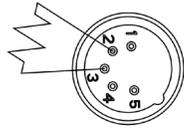

A DMX512 terminator reduces signal errors, avoiding most signal reflection interference. Connect PIN 2 (DMX-) and PIN 3 (DMX+) of the last fixture in series with a 120 Ohm, 1/4 W Resistor to terminate the DMX512.

## DMX ADDRESSING.

All fixtures should be given a DMX starting address when using a DMX controller, so the correct fixture responds to the correct control signal. This digital starting address is the channel number from which the fixture starts to “listen” to the digital control signal sent out from the DMX controller. The assignment of this starting DMX address is achieved by setting the correct DMX address on the digital control display on the fixture.

You can set the same starting address for all fixtures or a group of fixtures, or set different addresses for each individual fixture. Setting all fixtures to the same DMX address will cause all fixtures to react in the same way. In other words, changing the settings of one channel will affect all the fixtures simultaneously.

If you set each fixture to a different DMX address, each unit will start to “listen” to the channel number you have set, based on the quantity of DMX channels of each fixture. That means changing the settings of one channel will only affect the selected fixture.

For example, when this unit is operating in 4 channel mode, you should set the starting DMX address of the first unit to 1, the second unit to 5 (1 + 4), the third unit to 9 (1 + 4 + 4), and so on. See the chart below for more details.

CHANNEL MODE	UNIT 1 ADDRESS	UNIT 2 ADDRESS	UNIT 3 ADDRESS	UNIT 4 ADDRESS
4Ch	1	5	9	13
12Ch	1	13	25	37
15Ch	1	16	31	46
13Ch	1	14	27	40
17Ch (Extended & Standard Zones)	1	18	35	52
25Ch	1	26	51	76

# DMX TRAITS

RGB 4Ch	CMY 12Ch	CMY Ext 15Ch	Std 13Ch	Ext 17Ch	Std Zones 17Ch	Ext Zones 25Ch	DMX Values	Function
	1	1	1	1	1	1		<b>Dimmer</b>
							0 - 255	Intensity 0 → 100%
	2	2	2	2	2	2		<b>Dimmer Fine</b>
							0 - 255	Fine Adjustment
	3	3	3	3	3	3		<b>Shutter / Strobe</b>
							0 - 31	Shutter closed
							32 - 63	No function (shutter open)
							64 - 95	Strobe effect, slow to fast
							96 - 127	No function (shutter open)
							128 - 159	Pulse effect in sequences
							160 - 191	No function (shutter open)
							192 - 223	Random strobe effect, slow to fast
							224 - 255	No function (shutter open)
1			4	4	4	4		<b>Red</b>
							0 - 255	0 → 100%
				5		5		<b>Red Fine</b>
							0 - 255	Fine Adjustment
2			5	6	5	6		<b>Green</b>
							0 - 255	0 → 100%
				7		7		<b>Green Fine</b>
							0 - 255	Fine Adjustment
3			6	8	6	8		<b>Blue</b>
							0 - 255	0 → 100%
				9		9		<b>Blue Fine</b>
							0 - 255	Fine Adjustment
			7	10	7	10		<b>Lime</b>
							0 - 255	0 → 100%
				11		11		<b>Lime Fine</b>
							0 - 255	Fine Adjustment
					8	12		<b>Red 2</b>
							0 - 255	0 → 100%
						13		<b>Red Fine 2</b>
							0 - 255	Fine Adjustment
					9	14		<b>Green 2</b>
							0 - 255	0 → 100%
						15		<b>Green Fine 2</b>
							0 - 255	Fine Adjustment
					10	16		<b>Blue 2</b>
							0 - 255	0 → 100%
						17		<b>Blue Fine 2</b>
							0 - 255	Fine Adjustment

# DMX TRAITS

RGB 4Ch	CMY 12Ch	CMY Ext 15Ch	Std 13Ch	Ext 17Ch	Std Zones 17Ch	Ext Zones 25Ch	DMX Values	Function
					11	18		<b>Lime 2</b>
							0 - 255	0 → 100%
						19		<b>Lime Fine 2</b>
							0 - 255	Fine Adjustment
	4	4						<b>Cyan</b>
							0 - 255	0 → 100%
		5						<b>Cyan Fine</b>
							0 - 255	Fine Adjustment
	5	6						<b>Magenta</b>
							0 - 255	0 → 100%
		7						<b>Magenta Fine</b>
							0 - 255	Fine Adjustment
	6	8						<b>Yellow</b>
							0 - 255	0 → 100%
		9						<b>Yellow Fine</b>
							0 - 255	Fine Adjustment
4	7	10	8	12	12	20		<b>Zoom</b>
							0 - 255	Narrow → Wide
	8	11	9	13	13	21		<b>Zoom Fine</b>
							0 - 255	Fine Adjustment
								<b>Variable CCT</b>
						22	0 - 23	Open
	9	12	10	14	14		24 - 85	2400K → 8500K, see <b>Color Temperature Table</b> section
							86 - 255	8500K
								<b>Color</b>
							0	Open
							1 - 179	Virtual Swatch Book, see <b>Virtual Colors Table</b> section
								<b>Color Scroll</b>
							180 - 201	Clockwise, fast → slow
							202 - 207	Stop
							208 - 229	Counter-clockwise, slow → fast
							230 - 234	Open
								<b>Random Color</b>
	10	13	11	15	15	23	235 - 239	Fast
							240 - 244	Medium
							245 - 249	Slow
							250 - 255	Open

# DMX TRAITS

RGB 4Ch	CMY 12Ch	CMY Ext 15Ch	Std 13Ch	Ext 17Ch	Std Zones 17Ch	Ext Zones 25Ch	DMX Values	Function
11	14	12	16	16	24	<b>Dim Modes</b>		
						0 - 20	Standard	
						21 - 40	Stage	
						41 - 60	TV	
						61 - 80	Architectural	
						81 - 100	Theatre	
						101 - 120	Stage 2	
						<b>Dimmer Delay Time</b>		
						121	0s	
						122	0.1s	
						123	0.2s	
						124	0.3s	
						125	0.4s	
						126	0.5s	
						127	0.6s	
						128	0.7s	
						129	0.8s	
						130	0.9s	
						131	1.0s	
						132	1.5s	
						133	2.0s	
						134	3.0s	
						135	4.0s	
						136	5.0s	
137	6.0s							
138	7.0s							
139	8.0s							
140	9.0s							
141	10s							
142 - 255	Idle							
12	15	13	17	17	25	<b>Control</b>		
						0 - 9	Idle	
						10 - 19	Fan Mode: Auto (Default)	
						20 - 29	Fan Mode: Mute	
						30 - 39	Fan Mode: Silent	
						40 - 49	Fan Mode: High	
						50 - 59	Reset Zoom	
						60 - 69	Zoom Speed: Fast (Default)	
						70 - 79	Zoom Speed: Smooth	
80 - 99	Idle							


# DMX TRAITS

RGB 4Ch	CMY 12Ch	CMY Ext 15Ch	Std 13Ch	Ext 17Ch	Std Zones 17Ch	Ext Zones 25Ch	DMX Values	Function
								<b>Refresh Rate (Hz)</b>
							100	900
							101	910
							102	920
							103	930
							104	940
							105	950
							106	960
							107	970
							108	980
							109	990
							110	1000
							111	1010
							112	1020
							113	1030
							114	1040
							115	1050
							116	1060
							117	1070
							118	1080
							119	1090
	12	15	13	17	17	25	120	1100
							121	1110
							122	1120
							123	1130
							124	1140
							125	1150
							126	1160
							127	1170
							128	1180
							129	1190
							130	1200
							131	1210
							132	1220
							133	1230
							134	1240
							135	1250
							136	1260
							137	1270
							138	1280
							139	1290
							140	1300
							141	1310

# DMX TRAITS

RGB 4Ch	CMY 12Ch	CMY Ext 15Ch	Std 13Ch	Ext 17Ch	Std Zones 17Ch	Ext Zones 25Ch	DMX Values	Function
								<b>Refresh Rate (Hz) (continued)</b>
							142	1320
							143	1330
							144	1340
							145	1350
							146	1360
							147	1370
							148	1380
							149	1390
							150	1400
							151	1410
							152	1420
							153	1430
							154	1440
							155	1450
							156	1460
							157	1470
	12	15	13	17	17	25	158	1480
							159	1490
							160	1500
							161	2500
							162	4000
							163	5000
							164	6000
							165	10000
							166	15000
							167	20000
							168	25000
							169 - 200	No function
								<b>Dimmer Curves</b>
							201 - 210	Linear (Default)
							211 - 220	Square
							221 - 230	Inverse Square
							231 - 240	S-Curve
							241 - 255	Idle

# PIXEL GROUPING

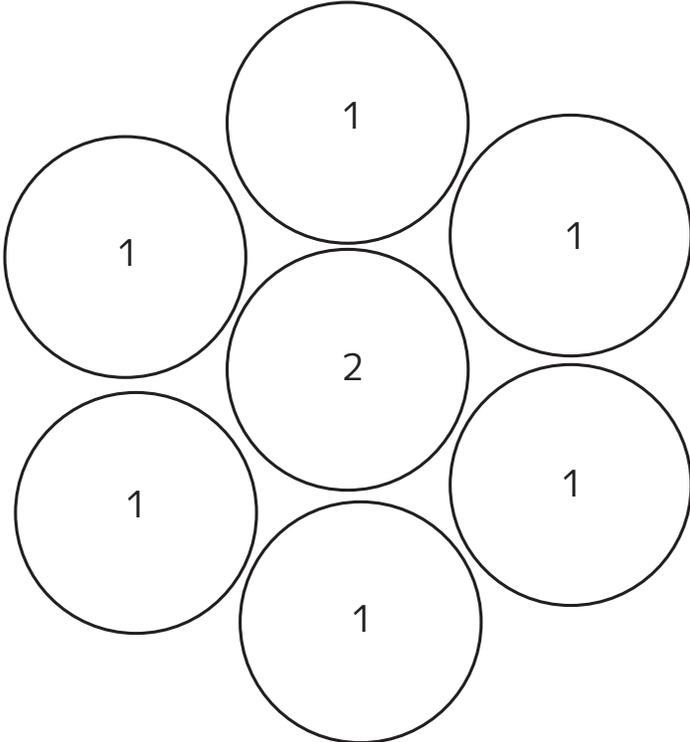

# VIRTUAL COLOR TABLE


VALUE	FILTER #	COLOR	VALUE	FILTER #	COLOR
1	7	Pale Yellow	36	132	Medium Blue
2	103	Straw	37	120	Deep Blue
3	151	Gold Tint	38	165	Daylight Blue
4	100	Spring Yellow	39	161	Slate Blue
5	10	Medium Yellow	40	118	Light Blue
6	101	Yellow	41	68	Sky Blue
7	104	Deep Amber	42	143	Pale Navy Blue
8	15	Deep Straw	43	131	Marine Blue
9	179	Loving Amber	44	115	Peacock Blue
10	21	Gold Amber	45	172	Lagoon Blue
11	105	Orange	46	116	Medium Blue Green
12	158	Deep Orange	47	90	Dark Yellow Green
13	22	Dark Amber	48	139	Primary Green
14	778	Millennium Gold	49	122	Fern Green
15	135	Deep Golden Amber	50	89	Moss Green
16	24	Scarlet	51	124	Dark Green
17	106	Primary Red	52	88	Lime Green
18	26	Bright Red	53	138	Pale Green
19	27	Medium Red	54	203	Quarter CT Blue
20	19	Fire	55	202	Half CT Blue
21	157	Pink	56	201	FULL CT Blue
22	36	Medium Pink	57	200	Double CT Blue
23	111	Dark Pink	58	206	Quarter CT Orange
24	128	Bright Pink	59	205	Half CT Orange
25	148	Bright Rose	60	204	FULL CT Orange
26	332	Special Rose Pink	56	201	FULL CT Blue
27	793	Vanity Fair	57	200	Double CT Blue
28	113	Magenta	58	206	Quarter CT Orange
29	46	Dark Magenta	59	205	Half CT Orange
30	48	Rose Purple	60	204	FULL CT Orange
31	126	Mauve	61-179		No Function
32	49	Medium Purple			
33	58	Lavender			
34	199	Palace Blue			
35	119	Dark Blue			

# COLOR TEMPERATURE





Colors shown are an approximate representation. <https://www.luxalight.eu/en/cie-convertoor>

DMX VALUE	COLOR TEMPERATURE (K)	DMX VALUE	COLOR TEMPERATURE (K)
24	2400	55	5500
25	2500	56	5600
26	2600	57	5700
27	2700	58	5800
28	2800	59	5900
29	2900	60	6000
30	3000	61	6100
31	3100	62	6200
32	3200	63	6300
33	3300	64	6400
34	3400	65	6500
35	3500	66	6600
36	3600	67	6700
37	3700	68	6800
38	3800	69	6900
39	3900	70	7000
40	4000	71	7100
41	4100	72	7200
42	4200	73	7300
43	4300	74	7400
44	4400	75	7500
45	4500	76	7600
46	4600	77	7700
47	4700	78	7800
48	4800	79	7900
49	4900	80	8000
50	5000	81	8100
51	5100	82	8200
52	5200	83	8300
53	5300	84	8400
54	5400	85	8500

# DIMMER MODES & CURVES

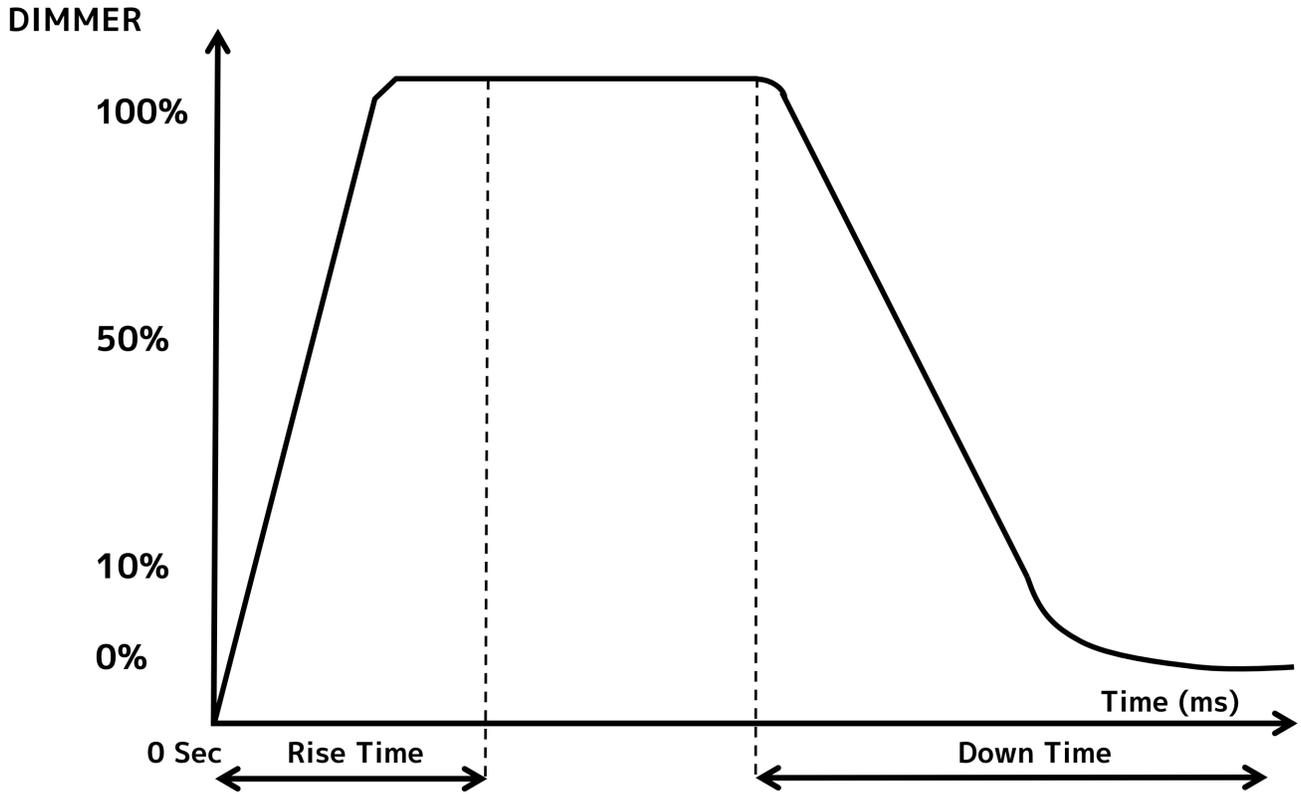

Dimming Curve Ramp Effect	0 sec Fade Time		1 sec Fade Time	
	Rise Time (ms)	Down Time (ms)	Rise Time (ms)	Down Time (ms)
Standard (default)	0	0	0	0
Stage	780	1100	1540	1660
TV	1180	1520	1860	1940
Architectural	1380	1730	2040	2120
Theatre	1580	1940	2230	2280
Stage 2	0	1100	0	1660

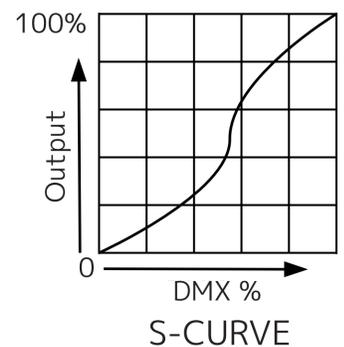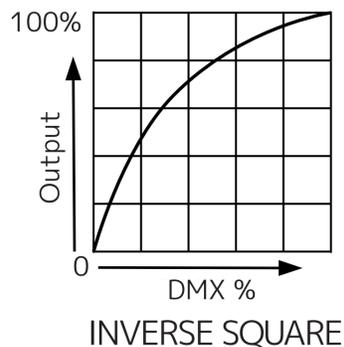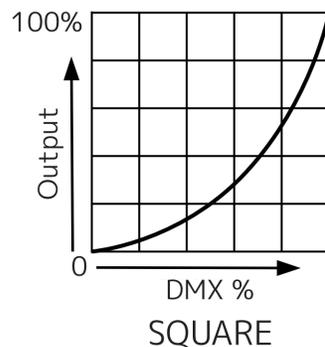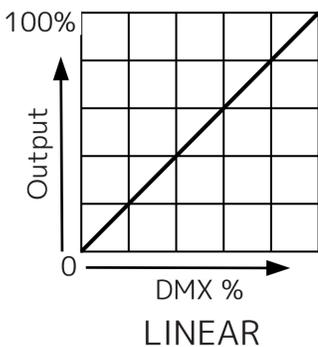

# PRIMARY-SECONDARY SETUP

This function allows you to link units together to run in a Primary-Secondary set-up, in which one unit will act as the controlling unit and the others will react to the controlling unit's built-in programs. Any unit can be configured to act as a Primary or as a Secondary, but only one unit in a given system can be programmed to act as the Primary.

## Primary-Secondary Connections and Settings:

1. Daisy chain your units via the XLR connectors on the bottom of each unit. Use standard XLR data cables to link your units together. Remember that the male XLR connector is the input and the female XLR connector is the output. The first unit in the chain (primary) will use the female XLR connector only. The last unit in the chain will use the male XLR connector only.
2. On the unit that you want to designate as the primary, use the display screen and control panel to navigate to **Control > Primary**, then press the ENTER button to confirm. Configure the operation of the device as desired.
3. On the units that you want to designate as secondaries, use the display screen and control panel to navigate to **Control > Secondary**, then press the ENTER button to confirm. The secondary units will now follow the operation of the primary unit.

## NOTES:

- Only one unit should be configured as the primary, while all the other units should be configured as secondaries.
- All units should be set to the same DMX channel mode.
- If fixtures fail to sync, verify that all settings mentioned above are the same, then power all devices off, then switch them on again to re-establish the link.

# MULTI-UNIT POWER-LINKING

This feature allows you to connect the fixtures to one another using the power cable input and output sockets.

**The maximum number of units that can be linked in this manner is as follows:**

- **5 units when running on 120V power.**
- **10 units when running on 230V power.**

**DO NOT EXCEED THIS MAXIMUM NUMBER WHEN POWER LINKING UNITS!**

All linked units must be of the same make and model type. Do not mix and match units!

## MAINTENANCE GUIDELINES



### CLEANING

Frequent cleaning is recommended to ensure proper function, optimized light output, and an extended life. The frequency of cleaning depends on the environment in which the fixture operates: damp, smoky, or particularly dirty environments can cause greater accumulation of dirt on the fixture's optics. Clean the external lens surface regularly with a soft cloth to avoid dirt/debris accumulation.

**NEVER use alcohol, solvents, or ammonia-based cleaners.**

### MAINTENANCE

Regular inspections are recommended to ensure proper function and extended life. There are no user serviceable parts inside this fixture. Please refer all other service issues to an authorized Elation service technician. Should you need any spare parts, please order genuine parts from your local Elation dealer.

Please refer to the following points during routine inspections:

- A. A detailed electrical check by an approved electrical engineer every three months, to make sure the circuit contacts are in good condition and prevent overheating.
- B. Be sure all screws and fasteners are securely tightened at all times. Loose screws may fall out during normal operation, resulting in damage or injury as larger parts could fall.
- C. Check for any deformations on the housing, color lenses, rigging hardware, and rigging points (ceiling, suspension, trussing). Deformations in the housing could allow for dust to enter into the fixture. Damaged rigging points or unsecured rigging could cause the fixture to fall and seriously injure a person(s).
- D. Electric power supply cables must not show any damage, material fatigue, or sediments.

**NEVER remove the ground prong from the power cable.**

# TORQUE SETTINGS FOR SCREWS

IN ORDER TO MAINTAIN THE IP65 RATING ON THE LIGHTING FIXTURES, ALL SCREWS MUST BE TIGHTENED TO THE FOLLOWING TORQUE SPECIFICATION USING A TORQUE DRIVER.

Refer to the table and diagram below for torque specifications.


TORQUE DRIVERS (Recommended): UTICA TS-30 (shown)

ALTERNATE DRIVERS:

- Proto J6107A
- Wiha 28887




**CAUTION! DO NOT OVER TORQUE SCREWS, AS THIS CAN CAUSE LEAKAGE ISSUES!**

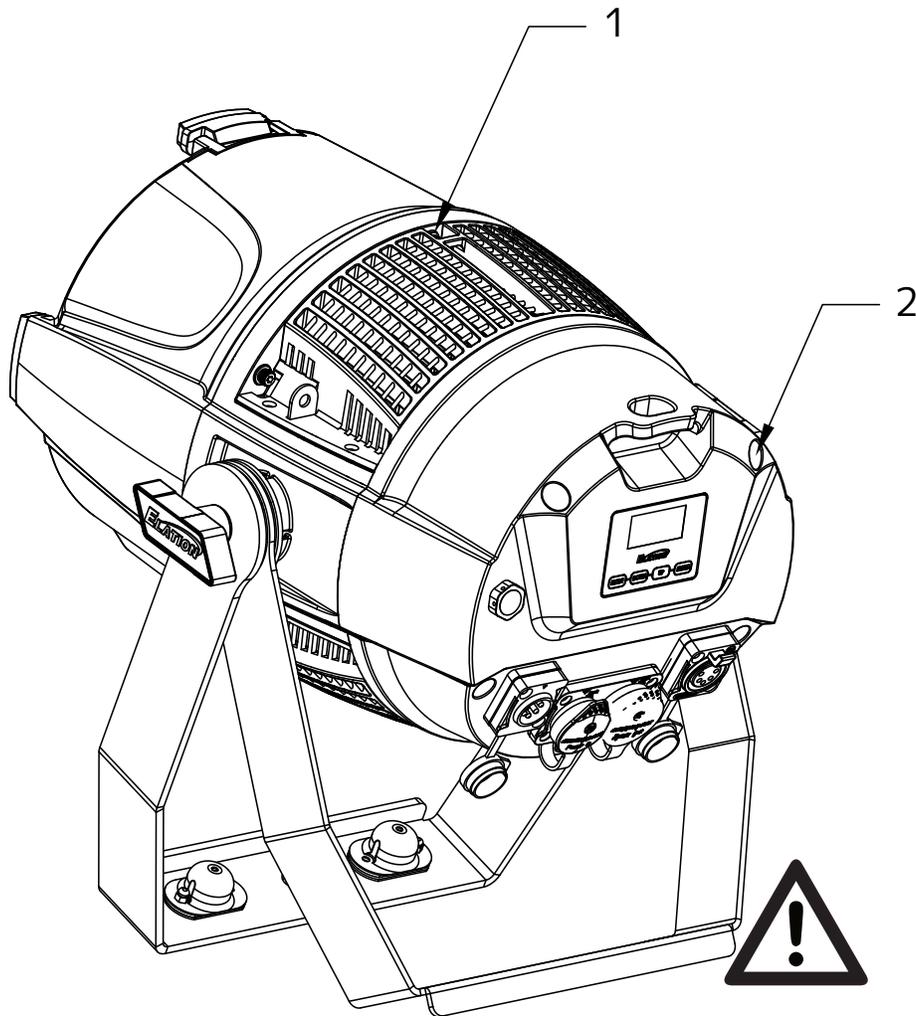

NO.	LOCATION	QUANTITY	TORQUE
1	Fixed Front Cover	6	11.3 ± 0.4 lb-in (13.0 ± 0.5 kg-cm)
2	Fixed Rear Cover	5	11.3 ± 0.4 lb-in (13.0 ± 0.5 kg-cm)

# IP TEST PARAMETERS

Following any repair or maintenance procedure that requires disassembly of the fixture, use Elation's IP Tester to confirm the IP integrity of the fixture. The air valve is located on the back panel next to the display screen, as shown in the diagram below. Please contact Elation Service for information regarding the Elation IP Tester, or visit the product information page online at: <https://www.elationlighting.com/ip-tester>

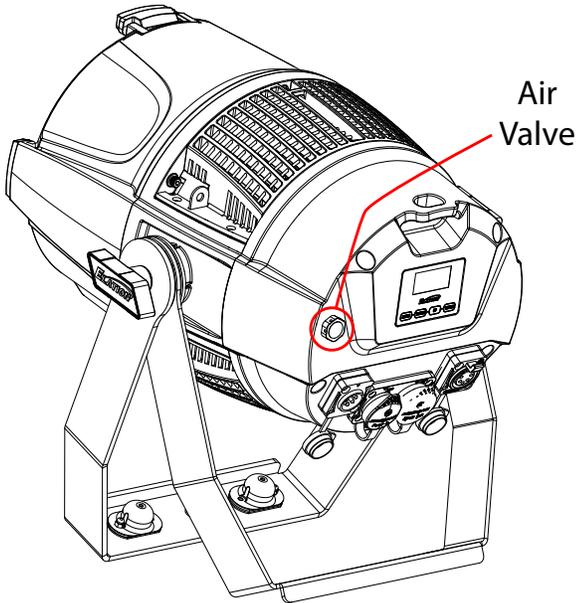

**CAUTION! THE USE OF PROTECTIVE GLOVES AND SAFETY GOGGLES IS STRONGLY RECOMMENDED WHILE PERFORMING THE IP PRESSURE TEST! AVOID PLACING YOUR FACE, EYES, HANDS, ETC IN CLOSE PROXIMITY TO THE FIXTURE'S LENS WHILE PERFORMING THE TEST!**


**DE-HUMIDIFICATION:** IP65 fixtures operating in high-humidity environments may experience residual fogging or condensation. Such fogging will not damage the fixture, and can be removed using the following procedure: position the unit with the air valve pointing upwards, then open the air valve and run the unit for 1-2 hours after reaching operating temperature. Then, while the fixture is still hot, re-install the air valve and allow the unit to cool down. Please note that this procedure should be performed in a dry, air-conditioned environment. Avoid additional fogging by drying the fixture completely before placing into a road case.



IP PRESSURE TESTING PARAMETERS					
Low Pressure Limit	High Pressure Limit	Inflation Time	Equilibrium Time	Detection Time	Max Leakage
2.901 psi (20.0 KPa)	3.336 psi (23 KPa)	30 sec	15 sec	15 sec	0.014 psi (100 Pa)


# DIMENSIONAL DRAWINGS

## FIXTURE

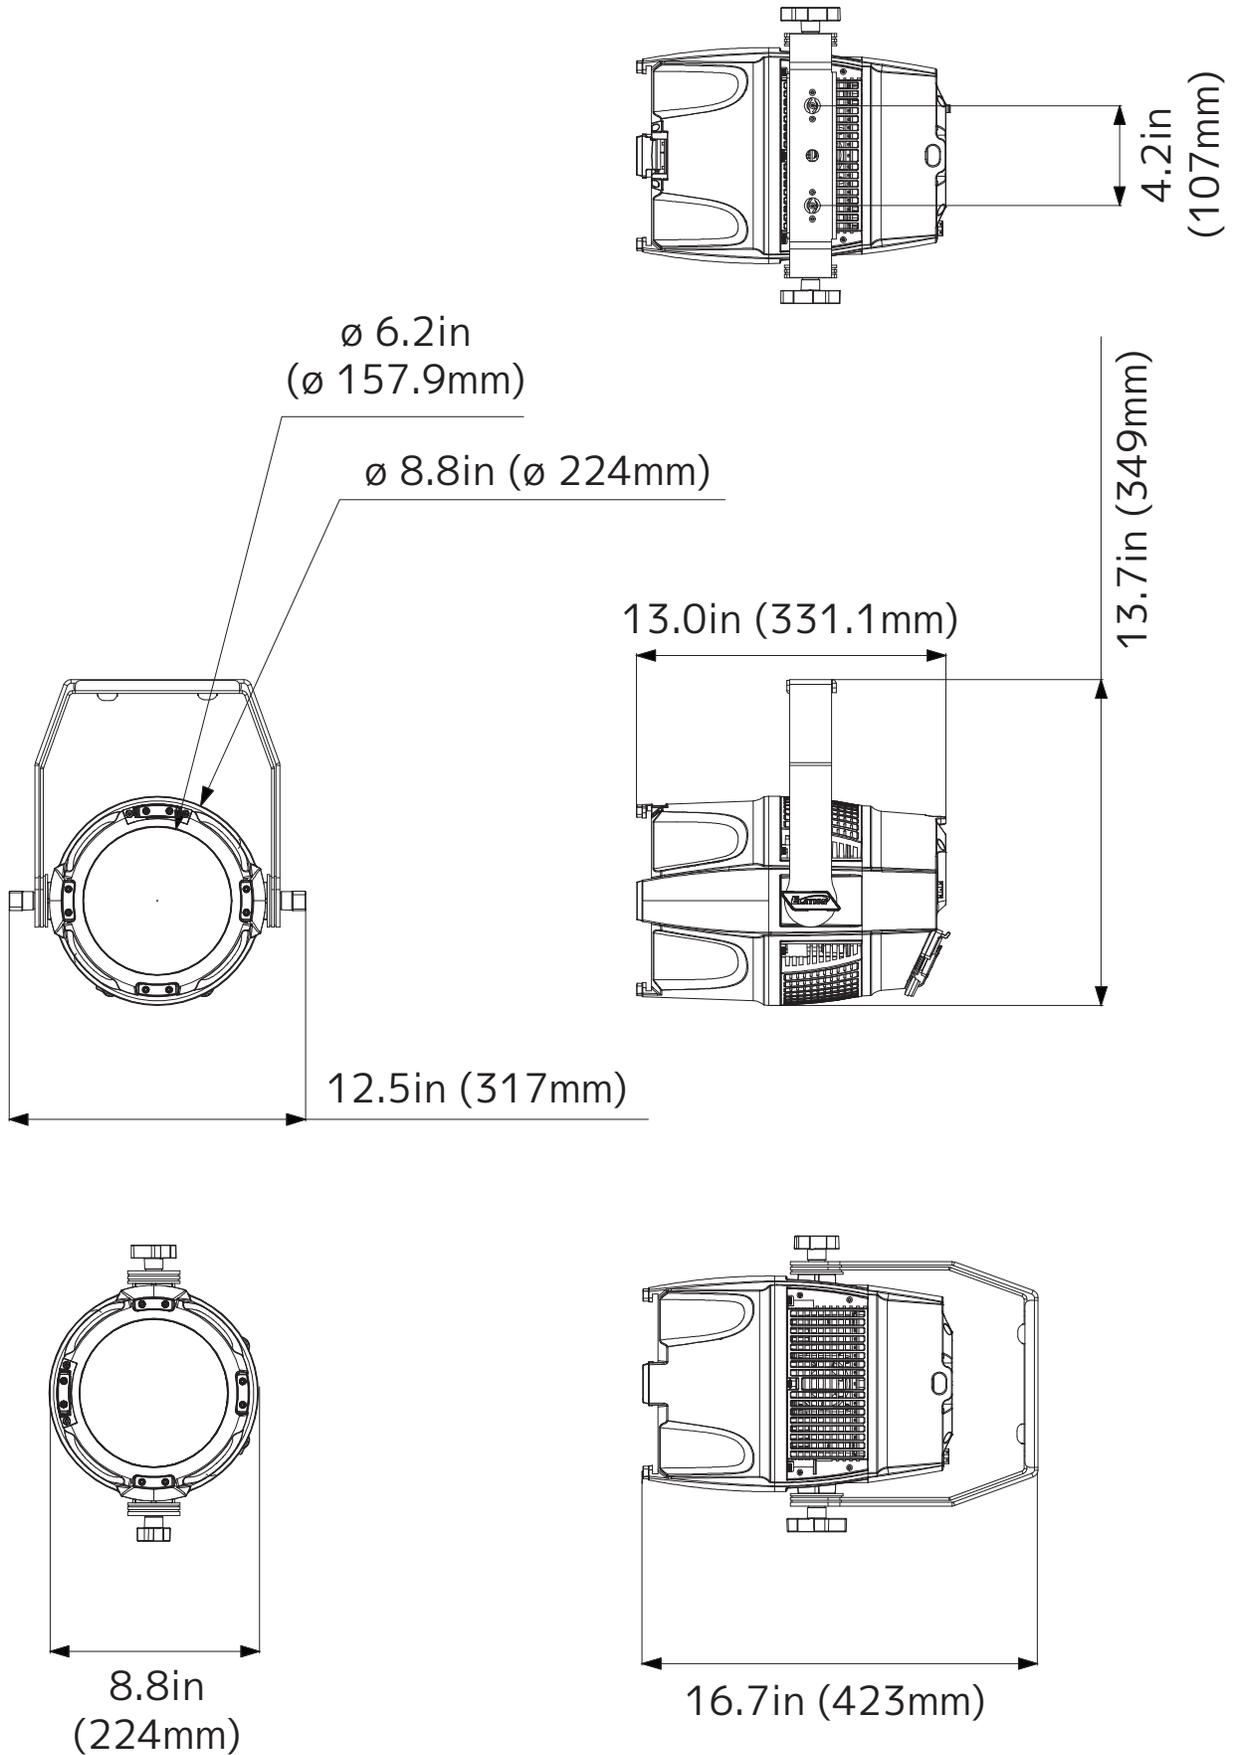


# DIMENSIONAL DRAWINGS

## BARNDOOR

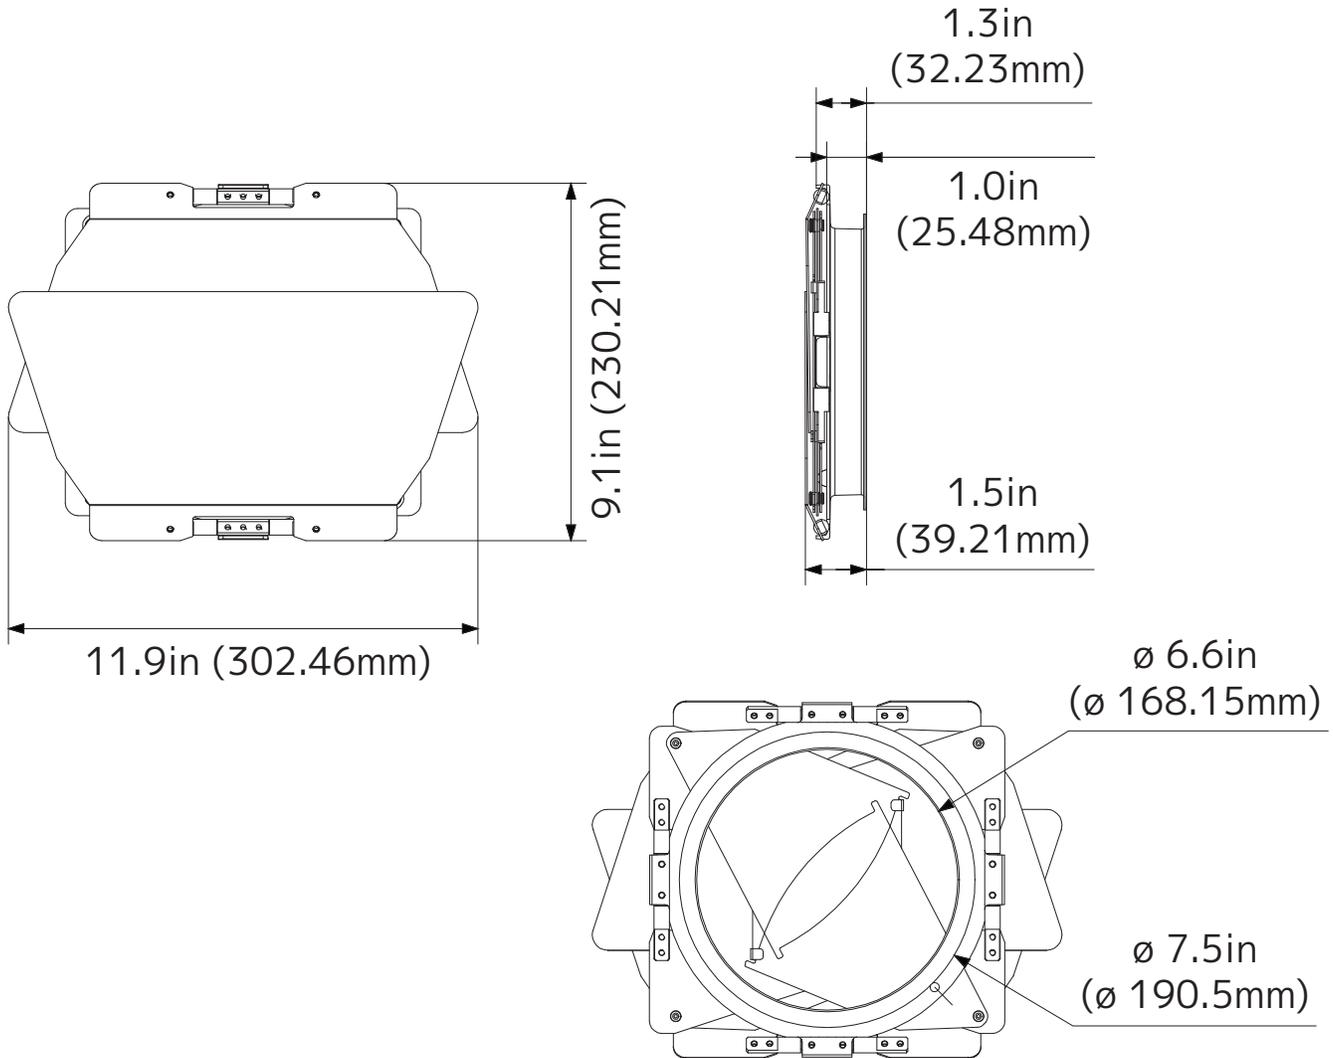

## GEL FRAME

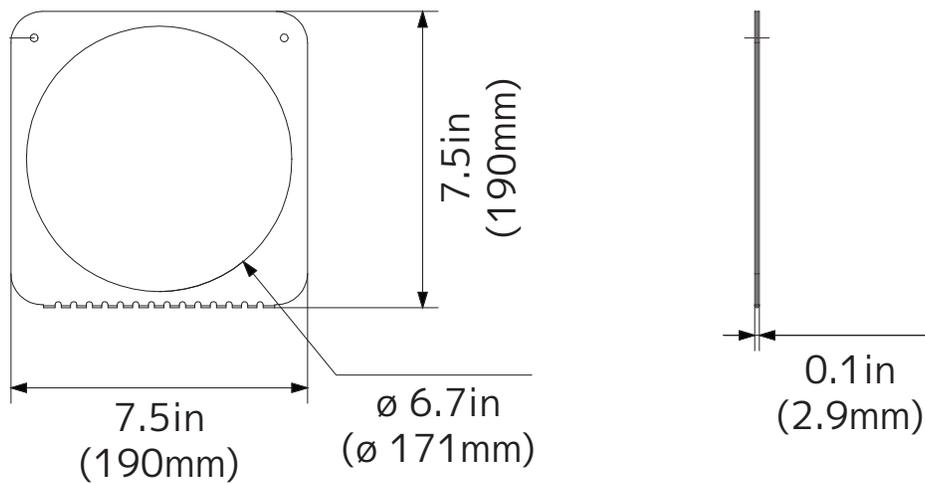

# SPECIFICATIONS

## SOURCE

(7) 60W RGBL LEDs  
 30,000 Hour Average LED Life\*  
 \*May vary depending on several factors including but not limited to: Environmental Conditions, Power/Voltage, Usage Patterns (On-Off Cycling), Control and Dimming.

## PHOTOMETRIC DATA

Total Lumen Output

- 5,345 (Integrating Sphere)
- 4,844 (Goniometer)
- CRI 82.8
- TLCI 74

Zoom Range 5° - 42°  
 Beam Angle: 5° - 42°  
 Field Angle: 8° - 60°

## EFFECTS

Dual Zone LED Control  
 Electronic Dimmer and Strobe  
 Variable 16-bit Dimming Modes and Curves

## COLOR

RGBL Color Array  
 CMY Emulation  
 Variable CCT 2400K - 8500K  
 Virtual Gel Swatch Book

## CONTROL / CONNECTIONS

7 DMX Channel Modes (4ch/12ch/15ch/13ch/17ch/17ch/25ch)  
 Manual and DMX Controlled Dimmer and Color  
 4 Button Control Panel, LED Display  
 Aria x2 Wireless Device Management  
 RDM (Remote Device Management)  
 5pin DMX and IP65 Locking Power Cable In/Out

## SIZE / WEIGHT

Length: 12.5" (317mm)  
 Width: 8.8" (224mm)  
 Vertical Height: 16.7" (423mm)  
 Weight: 20.1lbs. (9.1kg)

## ELECTRICAL / THERMAL

AC 100-240V - 50/60Hz  
 332W Max Power Consumption  
 Power Thru Capacity: 11A (3 units @110V; 7 units @240V)  
 5°F to 113°F (-15°C to 45°C)  
 1132.8 BTU/hr (+/- 10%)

## INCLUDED ITEMS

IP65 Locking Power Cable  
 Safety Cable

## OPTIONAL ITEMS

7.5" Gel Frame  
 7.5" Barndoor (KLP959)  
 # 8050000053 - Omega Bracket

## APPROVALS / RATINGS

CE | cETLus | IP65 | FCC | UKCA



# ORDERING INFORMATION

SKU (US)	SKU (EU)	ITEM DESCRIPTION
LLP301	1237000277	Elation Limelight Par S
KLP959	1236100143	KL Par 7.5" Barndoor
PENDING	PENDING	7.5" Gel Frame
8050000053	PENDING	Omega Bracket

# ERROR CODES

Error Codes subject to change without notice	
ERROR CODES	DESCRIPTION
FAN	Cooling Fan Error
TEMP	Temperature Error
ZOOM	Zoom Motor Error



## FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### FCC RADIO FREQUENCY INTERFERENCE WARNINGS & INSTRUCTIONS

This product has been tested and found to comply with the limits as per Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device uses and can radiate radio frequency energy and, if not installed and used in accordance with the included instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following methods:

- Reorient or relocate the device.
- Increase the separation between the device and the receiver.
- Connect the device to an electrical outlet on a circuit different from which the radio receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### Europe Energy Saving Notice

Energy Saving Matters (EuP 2009/125/EC)

Saving electric energy is a key to help protecting the environment. Please turn off all electrical products when they are not in use. To avoid power consumption in idle mode, disconnect all electrical equipment from power when not in use. Thank you

